

Factory Installed Smoke Detector Specification Sheet

For Factory Installed smoke detectors on 2-20 ton Commercial Rooftop Units

APPLICABLE UNITS: 48/50PG, PM, PD 03-28
48/50TC G4-30, 48/50HC 04-28,
50TQC 04-24, 50HCO 04-12
48/50HE, 50HEG 003-006
48/50AL, TH, TF 004-014
50HJQ, YFQ 004-012

GENERAL DATA

Type: Telexfire SuperDuct, 4-wire Photoelectric Sensing detector and control module
The Carrier factory installed smoke detector system comprises a four-wire controller and one or two sensors (Return Air and/or Supply Air). Its primary function is to shut down the rooftop unit in order to prevent smoke from circulating throughout the building. It is not to be used as a life saving device. Factory installed smoke detectors require no additional sampling tubes to be field installed.

SYSTEM DESCRIPTION

Controller: The controller includes a controller housing, a printed circuit board, and an easily removable clear plastic cover for access to the multiple terminal connections and relay contacts for connection to fire alarm systems, HVAC controls, and other auxiliary functions. A remote test/reset/visual alarm station can be connected to the controller.

Detectors: The detector includes a plastic housing, a printed circuit board, a clear plastic cover, an exhaust tube, and a sampling tube. The exhaust tube and sampling tube are attached during factory installation. The sampling tube varies in length depending on the size of the rooftop unit. The clear plastic cover permits visual inspections without having to disassemble the sensor. The cover forms an airtight chamber around the sensing electronics.

For installations using two detectors, the controller does not differentiate which detector signals an alarm or trouble condition. A rapid change in environmental conditions, such as smoke, causes the sensor to signal an alarm state but dust and debris accumulated over time does not. When the sensor's ability to compensate for environmental changes has reached its limit (100% dirty), the sensor signals a trouble condition. Air is introduced to the duct smoke detector's sensing chamber through a sampling tube that extends into the HVAC duct and is directed back into the ventilation system through an exhaust tube. The difference in air pressure between the two tubes pulls the sampled air through the sensing chamber. When a sufficient amount of smoke is detected in the sensing chamber, the sensor signals an alarm state and the controller automatically takes the appropriate action to shut down the unit via the factory installed wiring connections. Additional functions such as integration with a Building Alarm System, additional fans and blowers, notify the fire alarm control panel, etc. require field wiring and configuration.

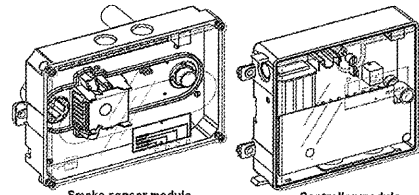


Fig. 1 - Controller and Detector (Sensor) Modules

1/2

11/1/2008

GUIDE SPECIFICATIONS

System Specifications:

- System Type:
 - Separate controller and detector modules
 - Four Wire Controller and Detector
 - Photoelectric Sensing
 - Environmental compensation with differential sensing for reliable, stable, and drift-free sensitivity
- Operating environment:
 - Temperature -20° to 158°F (-29° to 70° C)
 - Humidity 10% to 93% RH, non-condensing
 - Magnet-activated test/reset sensor switches
 - Tool-less connection terminal access
 - Recessed momentary switch for testing and resetting the detector

Table 1 - Controller Terminal Connections

Terminal Number	Name
1	AUX (-)
2	Reset
3	SUPV Contact COM
4	Alarm Contact COM
5	Alarm Contact NO
6	AUX 1 Contact COM
7	AUX 2 Contact NO
8	AUX 2 Contact NC
9	24V AC/DC In (+)
10	24V AC/DC In (-)
11	Not Used
12	Alarm Strobe
13	SUPV Contact NO
14	SUPV Contact NC
15	REM Alarm LED Out
16	AUX 1 Contact NC
17	AUX 1 Contact NO
18	AUX 2 Contact COM
19	18 VDC Output (+)
20	18VDC Output (-)
TB3-1	Not Used
TB3-2	Not Used
N	AC Neutral
L	AC Line

2/2

11/1/2008

Controller specifications:

- Controller shall include:
 - One set of normally open alarm initiation contacts for connection to an initiating device circuit on a fire alarm control panel
 - Two Form-C auxiliary alarm relays for interface with rooftop unit or other equipment
 - One Form-C supervision (trouble) relay to control the operation of the Trouble LED on a remote test/reset station
 - Capable of direct connection to two individual detectors for multiple
 - Can be wired to up to 14 other duct smoke detectors for multiple fan shutdown applications

Wire Size:
High voltage terminals: 12-22 AWG
All others: 14-22 AWG
Operating voltages: 120 VAC, 50/60 Hz
220/240 VAC, 50/60 Hz

Operating current:
20-25VDC: 175 mA
24VAC: 500 mA at 50/60 Hz
120VAC: 100 mA at 50 Hz
75 mA at 60 Hz
220/240 VAC: 83 mA at 50 Hz
40 mA at 60 Hz
Red (Alarm)
Yellow (Trouble)
Green (Power)

LED indicators:
Relays
Alarm initiation relay:
Quantity: 1
Style: Normally open
Ratings: 2.0A at 30 VDC (resistive)


Auxiliary relays:
Quantity: 2
Style: Form C
Ratings: 10A at 250 VAC
Supervision (trouble) relay:
Quantity: 1
Style: Form C
Ratings: 2.0A at 30 VDC (resistive)

Detector specifications:
Sensor: 8.70x5.45x1.90 in.
Smoke detection method: Photoelectric
Air velocity (min-max): 103 - 4,000 ft/min
Pressure differential (min-max): 0.055 - 1.00 in
Sensitivity: 0.57 to 2.48 %obscuration/ft
Wire size: 14 to 22 AWG
Reset time: 2 second maximum
Power up time: 8 seconds max
Alarm lead response time: 5 to 7 seconds
LED indicators:
Red (Alarm)
Yellow (Trouble)
Green (Power)

1/2

11/1/2008

DUCT DETECTOR - TEST STATION - ALARM/STROBE

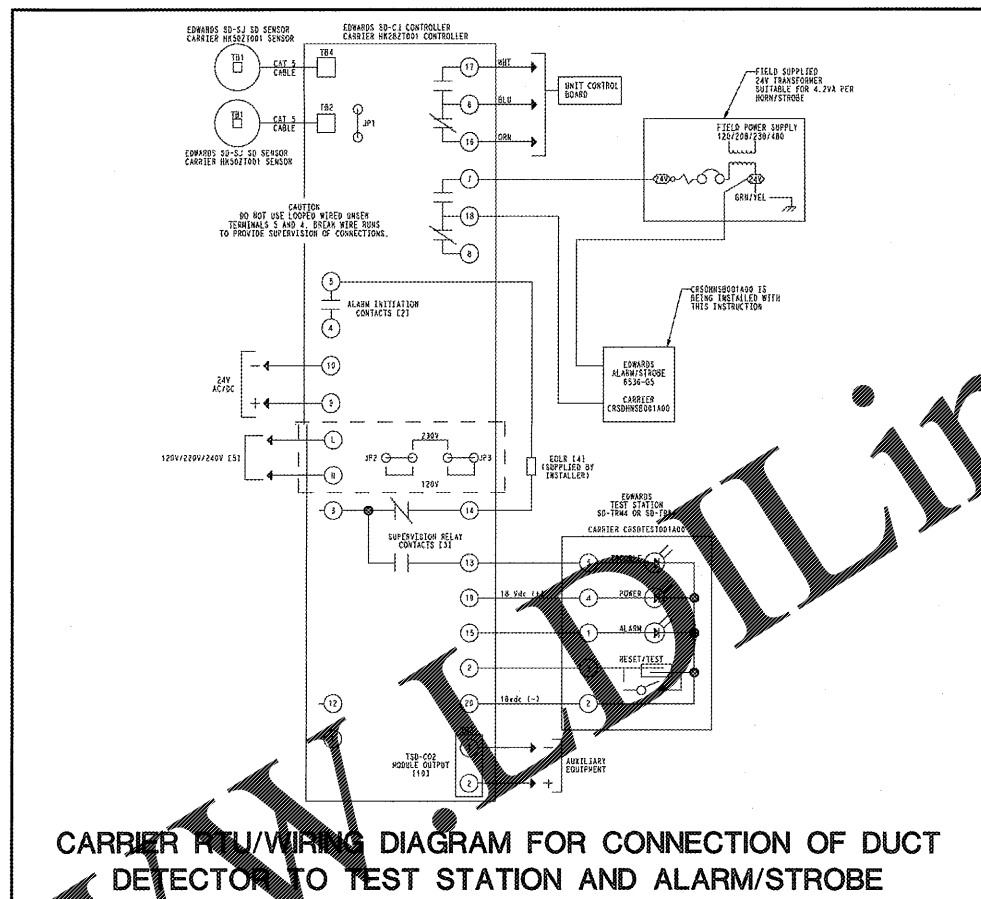

CARRIER RTU/WIRING DIAGRAM FOR CONNECTION OF DUCT DETECTOR TO TEST STATION AND ALARM/STROBE



Installation Instructions

IMPORTANT: Read these instructions completely before attempting to install the necessary Remote Magnet-Test/Reset Station.

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified personnel should install, repair, or service this equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on air conditioning equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quecting cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes, the current editions of the National Electrical Code (NEC), NFPA 70, In Canada refer to the current editions of the Canadian Electrical Code CSA C22.1.

Recognize safety information. This is the safety-alert symbol. When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury or death. Understand these signal words: DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies hazards which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in correct installation, reliability, or operation.

WARNING
ELECTRICAL SHOCK HAZARD
Failure to follow this warning could result in personal injury or death.
Before installing or servicing system, always turn off main power to system and install lockout tag. There may be more than one disconnect switch. Turn off necessary heater power switch if applicable.

CAUTION
CUT HAZARD
Failure to follow this caution may result in personal injury.
Sharp metal parts may have sharp edges or burrs. Use care and wear appropriate clothing.

WARNING
PERSONAL INJURY AND ENVIRONMENTAL HAZARD
Failure to relieve system pressure could result in personal injury and/or death.
1. Relieve pressure and recover all refrigerant before servicing existing equipment. All three final unit service valves, including service valves, must be closed. Do not use any repair or repair parts until the system is fully recovered and repaired. Recover during repair and proper disposal.

GENERAL
The SD-TRM4 Remote Test/Reset Station is used with the SuperDuct™ four-wire duct smoke detector. Each remote test/reset station provides a green LED to indicate power, a red LED to indicate alarms, and a yellow LED to indicate trouble and detector dirty levels. The SD-TRM4 requires a magnetic to activate test and reset functions. (See Fig. 1.)

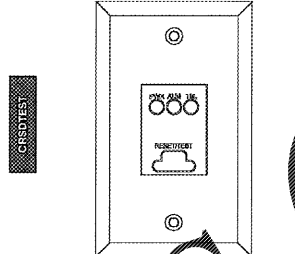


Fig. 1 - SD-TRM4

SPECIFICATIONS

Dimensions (Electrical Boxes)	1 1/2" x 1 1/2" x 1 1/2" - gang box 1 1/2" x 1 1/2" x 1 1/2" - in square box, 1 1/2" - 1 1/2" in deep with 1-gang cover
Alarm (red) Trouble (yellow) Power (green)	Clear lens
LED Type	14 to 22 AWG
Wire Size	10 GA. min
Resistance Per Wire	Included in controller specification
Current Requirements	SuperDuct™ Four-Wire Smoke Detector
Compatible Detectors	SuperDuct™ Four-Wire Smoke Detector
Operating Environment	Temperature: 32° - 131°F (0° - 55°C) Humidity: 10% RH, non-condensing Storage Temperature: -20° to 60°C (-4° to 140°F)

REMOTE TEST/RESET STATION TESTS

Test/reset station alarm test using the SuperDuct™ Four-Wire Smoke Detector.
The test/reset station alarm test checks the station's ability to initiate and indicate an alarm state.

CAUTION
ALARM SYSTEM ACTIVATION HAZARD
Failure to follow this caution may result in energy alarm system activation and possible fires.

1. Place the test/reset station in the alarm state. Follow part of step 2, disconnect all auxiliary equipment from the controller before performing the test. If the test detector is connected to a fire alarm system, the fire alarm authorities before performing this test.

2. Perform the alarm test using an SD-TRM4:
a. Add the test magnet to the target area for seven seconds.
b. Verify that the test/reset station's Alarm LED turns on.

3. After performing an alarm test using an SD-TRM4, reset the sensor by holding the test magnet to the target area for 10 seconds.

4. Verify that the test/reset station's Alarm LED turns off.

INSTALLATION

Mount the remote test/reset station on a single gang box as shown in Fig. 2.

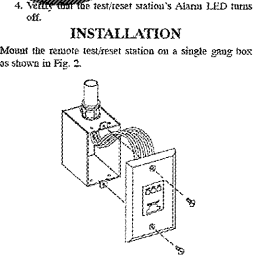


Fig. 2 - SD-TRM4 Installation Diagram

WIRING

Wire the remote test/reset station to the four-wire controller as shown in Fig. 3.




Fig. 3 - Wiring Diagram

Installation Instructions for the 6536-G5 Horn/Strobe

Description
The 6536-G5 is an audible/visual signal UL Listed for general purpose signaling applications.

Installation
A qualified electrician familiar with National Electrical Code and local code requirements must install this product. Failure to follow the safety precautions in this instruction sheet could result in product or property damage, severe personal injury or death.

1. Connect the horn/strobe wire leads and terminals (Figure 2). The horn and strobe are connected together at the factory.
2. Mount the horn/strobe onto the electrical box. Secure it using two screws (supplied).
3. Perform an operational test.

Maintenance

Perform regularly scheduled testing at least twice a year or more often as dictated by local authorities having jurisdiction.

WARNING
To reduce the risk of shock, do not remove lens or tamper with unit when the circuit is energized. Do not connect AC power until installation is complete.

The 6536-G5 horn/strobe (Figure 1) can be mounted on any single gang 2" x 4" (51 mm x 102 mm) electrical box, double gang 4" x 4" (102 mm x 102 mm) electrical box, or standard 4" x 4" (102 mm x 102 mm) junction box with a plaster ring.

1. Install an appropriate electrical box using suitable hardware.

Table 1. Specifications

Operating Voltage	24V 50/60 Hz	24V DC
Alarm Current	175 mA	125 mA

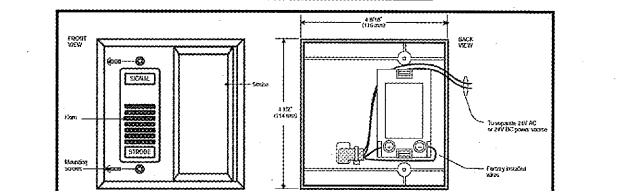


Figure 1 - Details of Horn/Strobe




Figure 2 - Connecting the Horn and Strobe

CHESTER, CT 203-669-3300 FAX 860-877-7748 P-047550-1872 ISSUE 1 © 1999

Norman E. Gath
FL Lic # 57809
Firm Lic # 27905

STATE OF FLORIDA
Professional Engineer
No. 57809
01/04/19

DRAWN BY: CEV

CRAIG A. SCHNEIDER, AIA
ARCHITECT

1736 East Sunshine, Suite 417
Springfield, Missouri 65804

417-862-6558
417-862-3265
e-mail: architect@esterlyschneider.com

PROJECT:
NEW O'REILLY AUTO PARTS STORE
1345 15TH STREET
PANAMA CITY, FL #1
HVAC DETAILS

O'Reilly AUTO PARTS

CORPORATE OFFICES
5550 PATTERSON
SPRINGFIELD, MISSOURI 65802
(417) 862-2674 TELEPHONE

COMM # 4275
DATE: 01-04-19
REVISION
DATE:

SGE
SMITH-GOTH ENGINEERS, INC.

3855 S. JEFFERSON AVE. P: 417-882-2200
SPRINGFIELD, MO 65807 F: 417-882-1188
WWW.SMITHGOTH.COM

M3 of 4