


GENERAL GUEST CORRIDOR FLOOR NOTES


- REFER TO MANUFACTURES SEAMING DIAGRAM.
- REFER TO FINISH NOTES ON SHEET A001 FOR MORE DETAILS.
- REFER TO NOTES PATCH & REPAIR.
- REFER TO GUESTROOM TYPES FOR SCOPE OF WORK AT GUESTROOMS.
- REPLACE ALL SMOKE STAINED DETECTORS THROUGHOUT THE PROPERTY.
- REMOVE ROUTERS IN CORRIDORS AND PATCH GWB FOR NEW FINISHES.

KEYNOTES

- REMOVE CARPET/ CARPET PAD.
- REMOVE CHAIR RAIL.
- REMOVE VINYL WALL COVERING AND CORNER GUARDS (IF ANY). DO NOT ALLOW THE PAPER SURFACE OF THE DRYWALL TO BE TORN. PATCH AND REPAIR WALLS AS REQUIRED TO RECEIVE NEW FINISHES.
- REMOVE WINDOW TREATMENT, AND HARDWARE. VALANCE REMAIN.
- REMOVE WALL SCONCES.
- REMOVE WIRELESS ROUTERS. PATCH ADJACENT SURFACES AND PREPARE TO RECEIVE NEW FINISHES.
- MODIFY EXISTING RAILINGS. REFER TO A002 FOR DETAILS.
- NEW CARPET AND PAD.
- NEW VINYL WALL COVERING.
- PAINT CEILING.
- PAINT EXISTING WOOD VALANCE.
- PROVIDE NEW FULL-HEIGHT MOVEABLE CORNER GUARD ON ALL OUT-SIDE CORNERS.
- PREP AND PATCH EXISTING BOARD AND TRIM.
- RESTORE DRYWALL TO LIKE NEW CONDITION.
- PAINT EXISTING WOOD TRIM TO LIKE NEW CONDITION.
- REPAIR SIGNAGE PANELS. PNT-006.
- INSTALL WALL SCONCE.

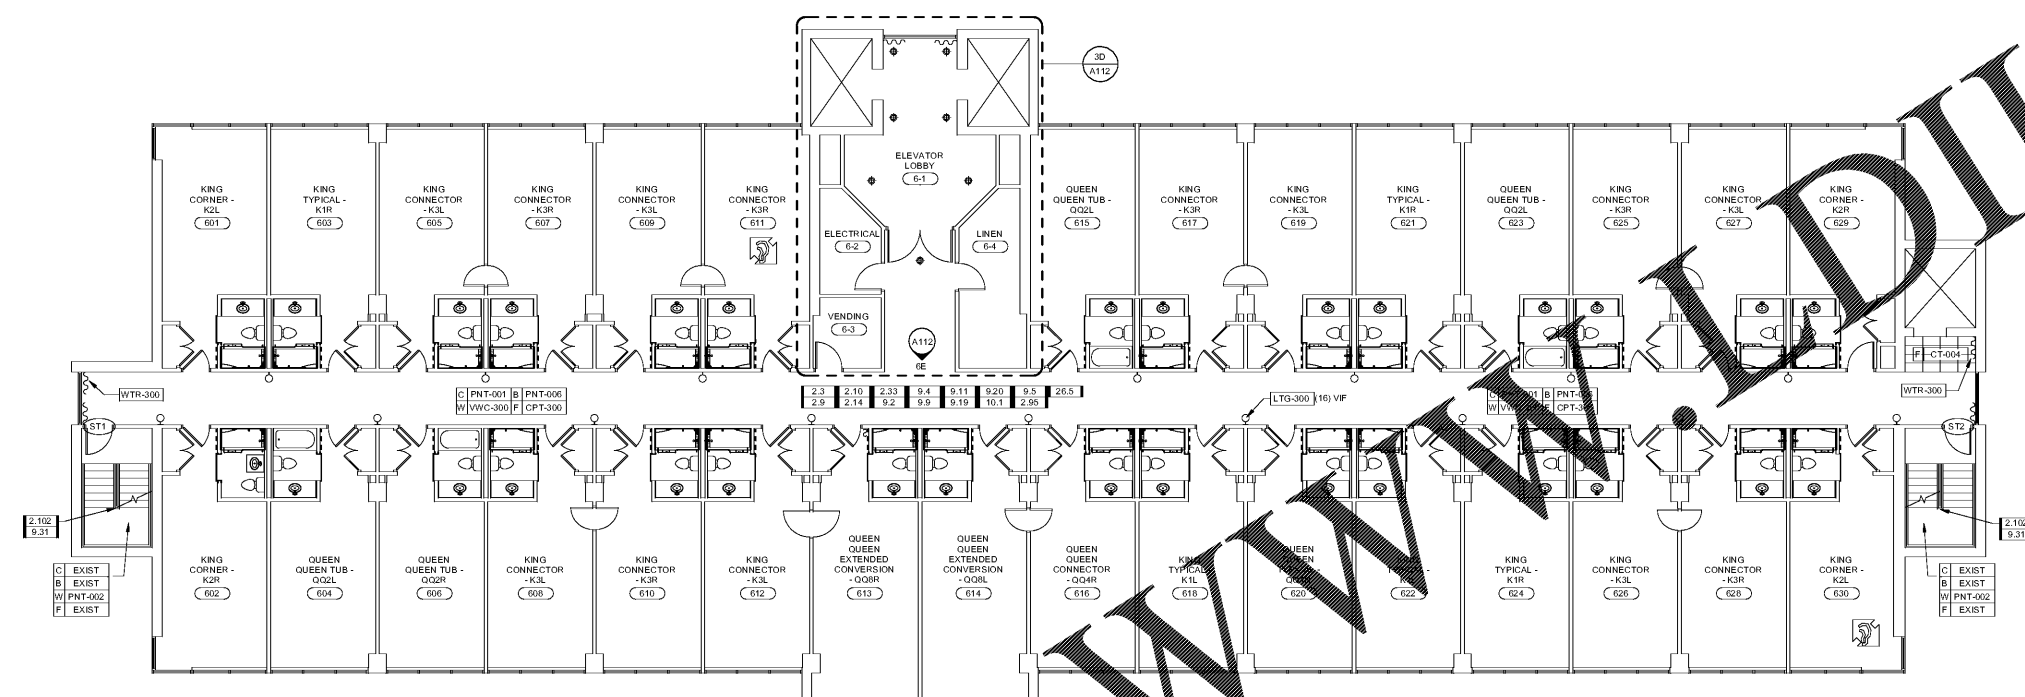

6C OVERALL PLAN - 6TH FLOOR
SCALE: 1/8" = 1'-0"

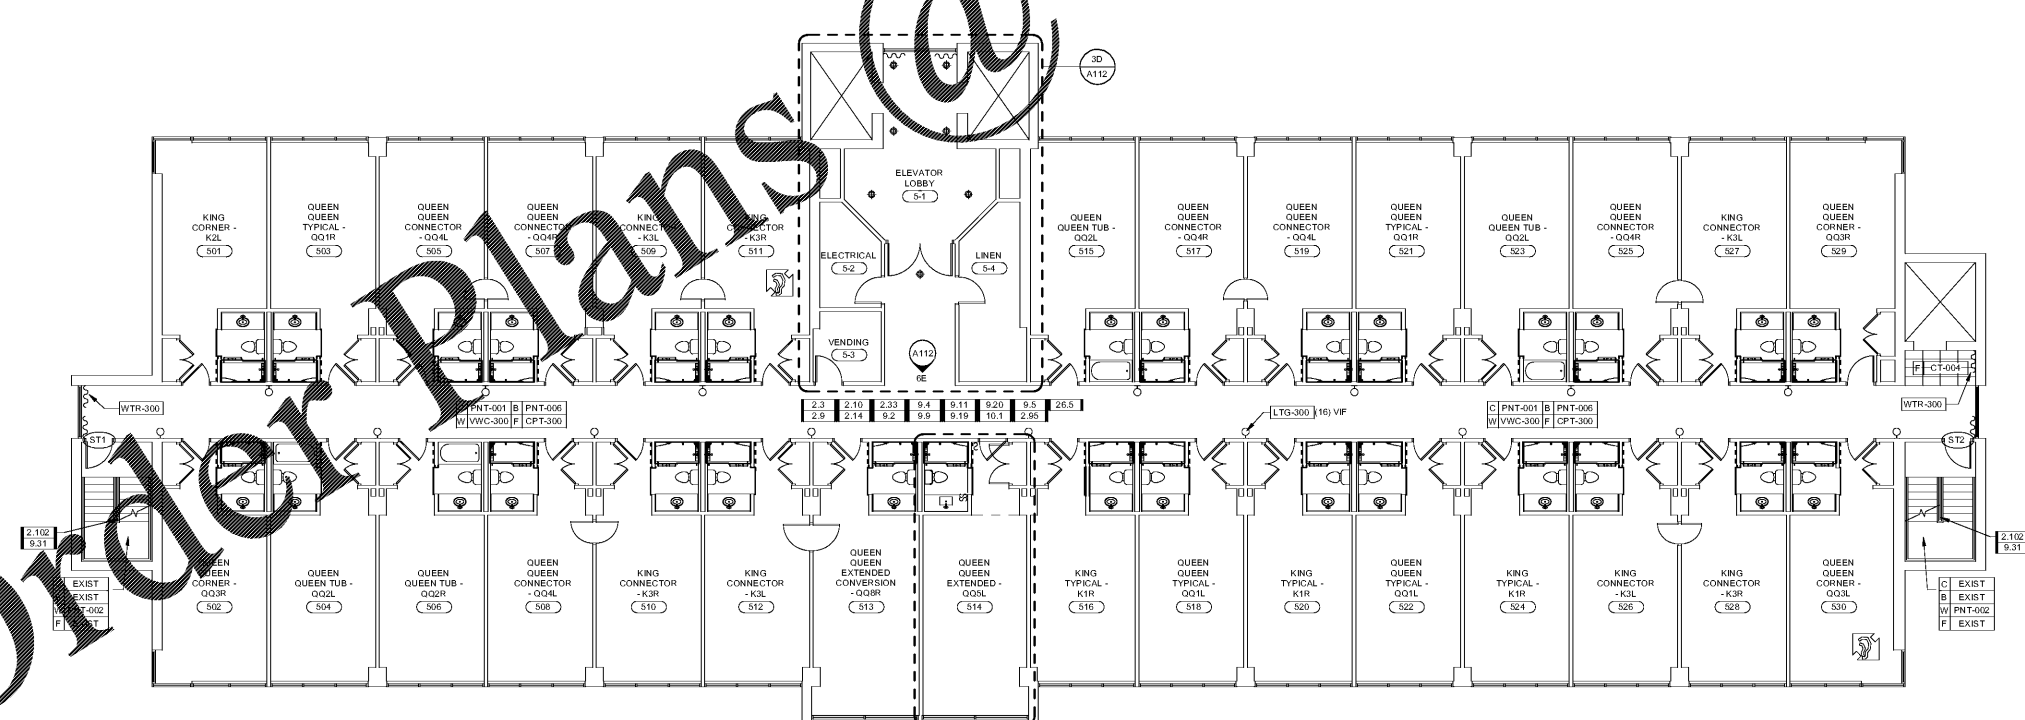

6A OVERALL PLAN - 5TH FLOOR
SCALE: 1/8" = 1'-0"



COPYRIGHT © 2017 BASKERVILLE. USE OF THIS WORK IN WHOLE OR IN PART IS PROHIBITED WITHOUT EXPRESSED WRITTEN CONSENT.

ISSUE
6/12/2017 -
CONSTRUCTION SET

DRAWING TITLE
5TH AND 6TH FLOORS
- PLAN

DRAWING NO.
A114

Order Plans @

WWW.DI.LINE.COM