




KEYNOTES

- 1 RELOCATE EX. CEILING DIFFUSER ONTO NEW CEILING. DIFFUSERS SHALL BE THOROUGHLY CLEANED AND REPAIRED AS NEARLY TYPICAL.
- 2 EX. CEILING DIFFUSER TO REMAIN.
- 3 EX. HVAC EQUIPMENT TO REMAIN.
- 4 REPLACE EX. FP RECONNECT TO ITS DUCTWORK. PIPING AND CONTROLS.
- 5 RELOCATE EX. VAV BOX AND INDUSTRIAL FILING. RECONNECT TO ITS DUCTWORK. PIPING AND CONTROLS.
- 6 REMOVE AND RELOCATE EX. VAV BOX. RECONNECT TO ITS DUCTWORK. PIPING AND CONTROLS.

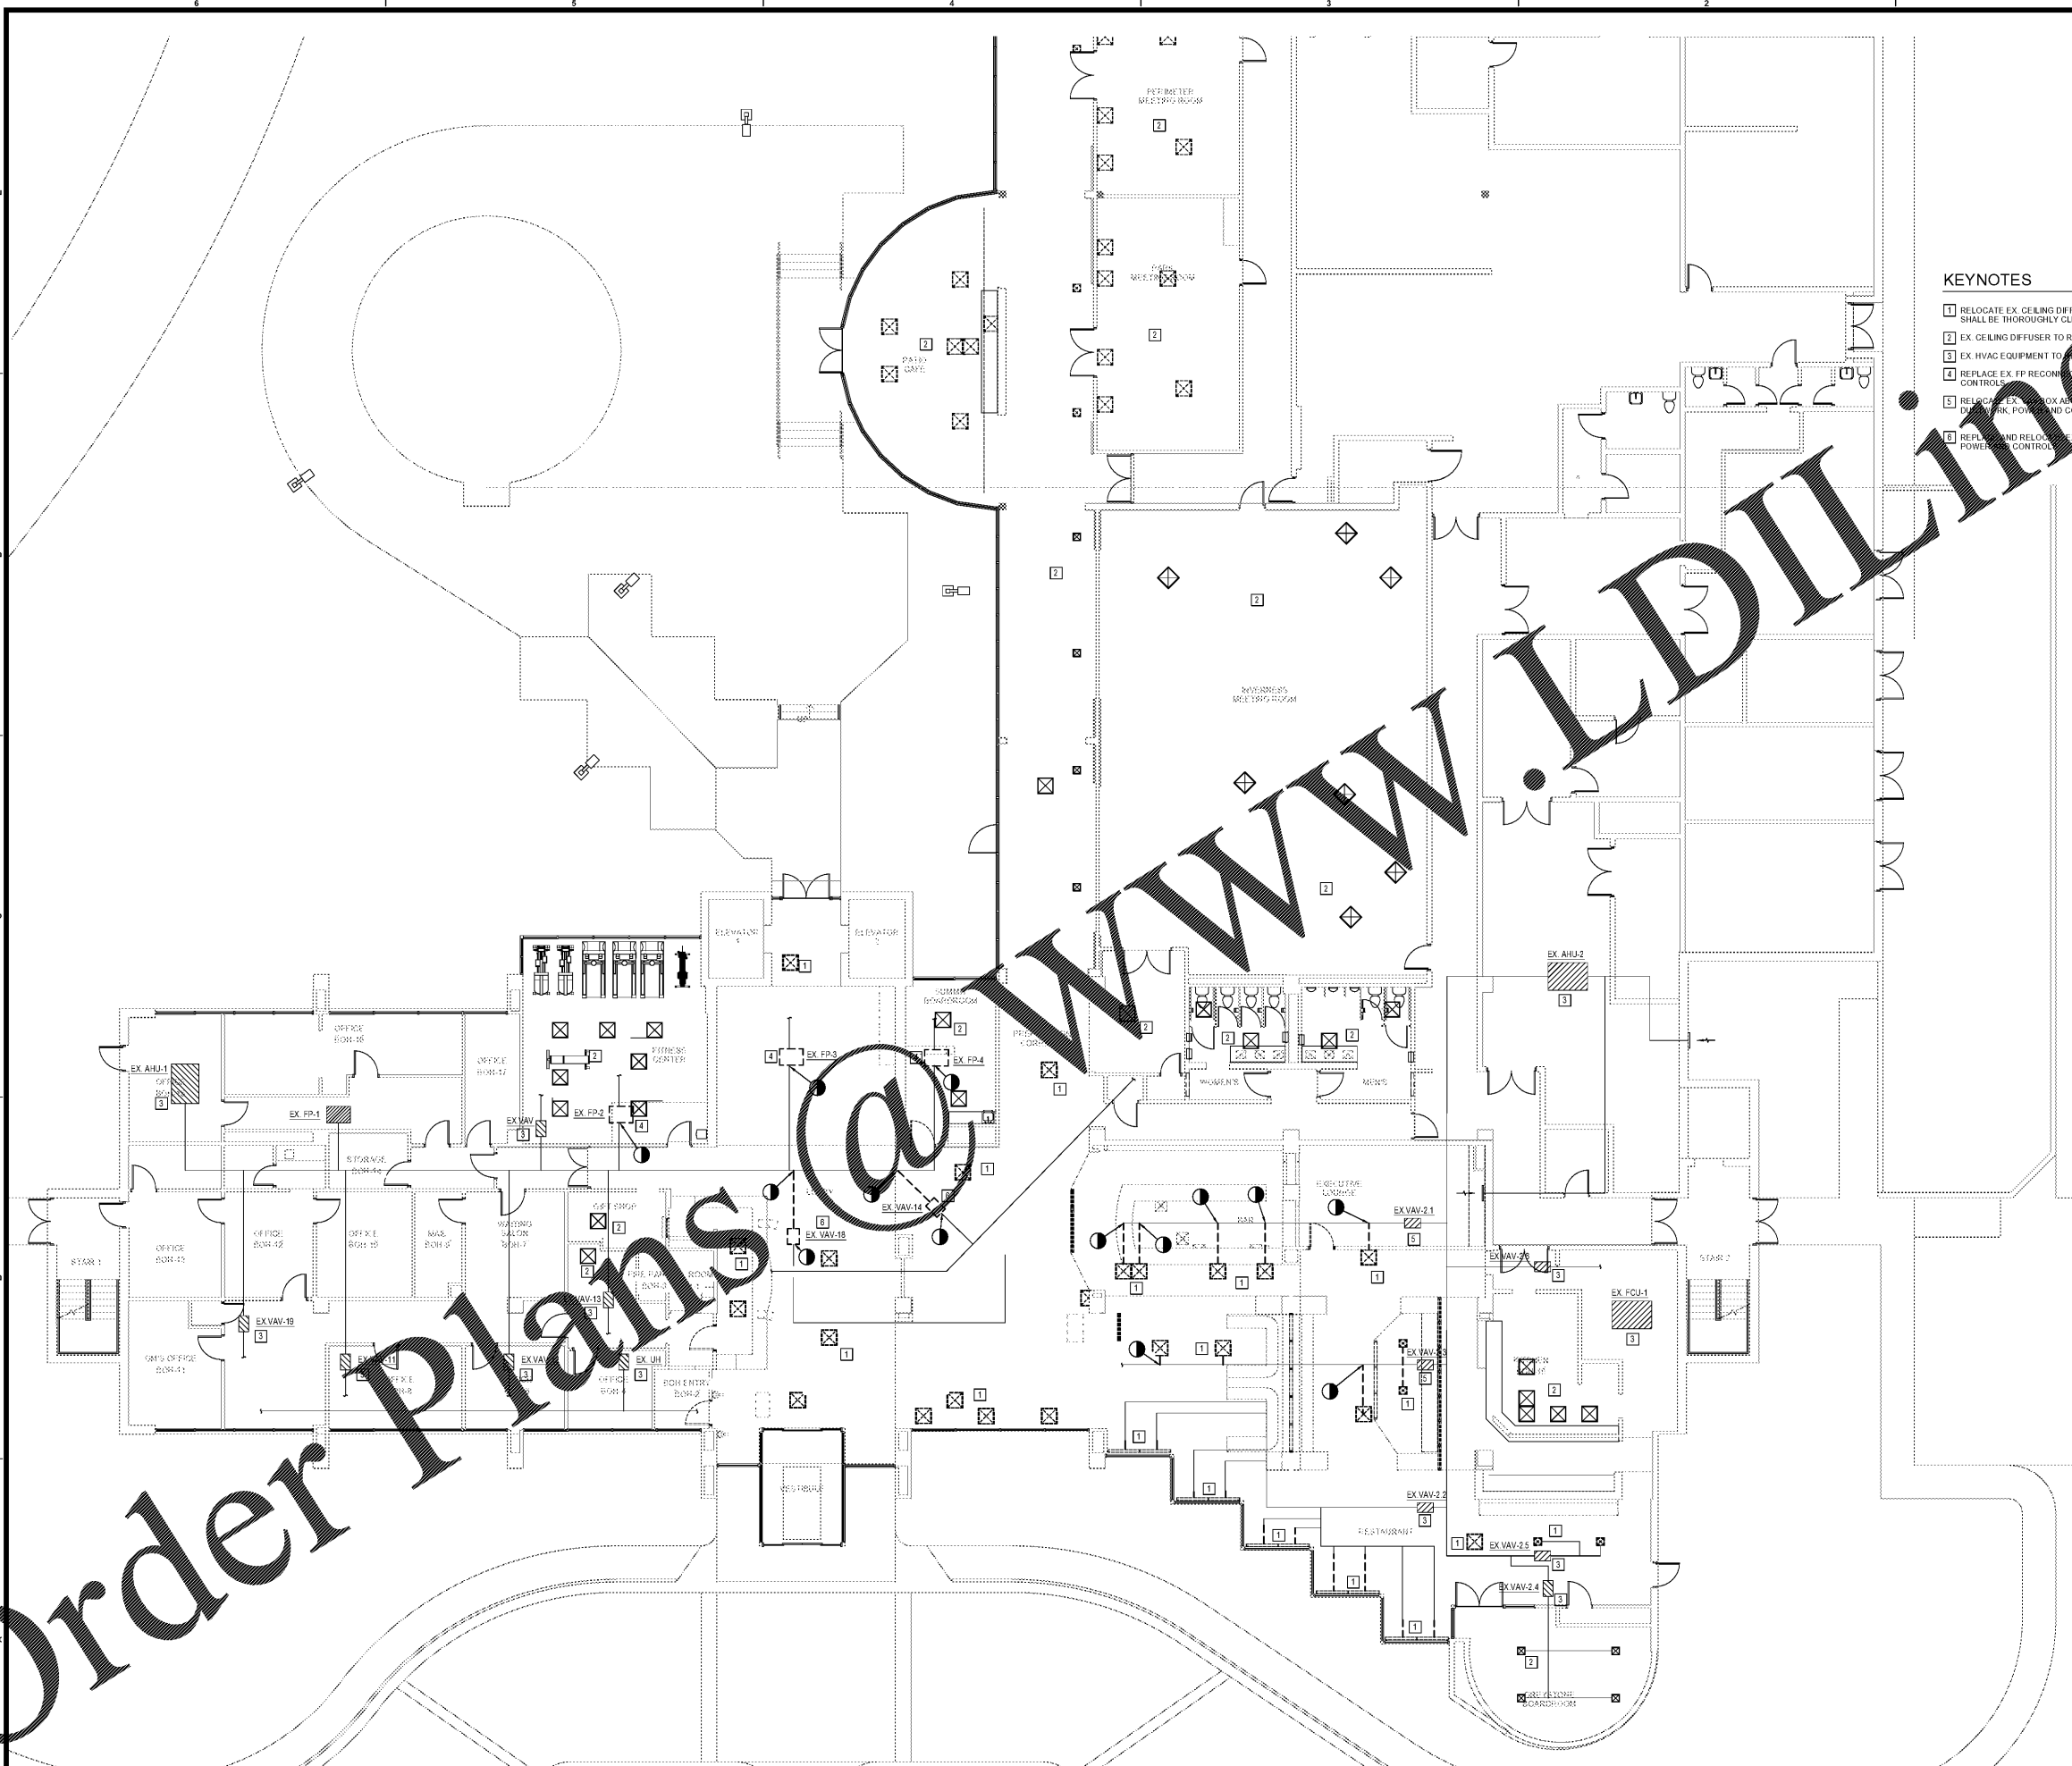

Order Plans @ WWW.LDILLINE.COM

6A FIRST FLOOR DEMOLITION PLAN - SOUTH
SCALE: 1/8" = 1'-0"