


Order

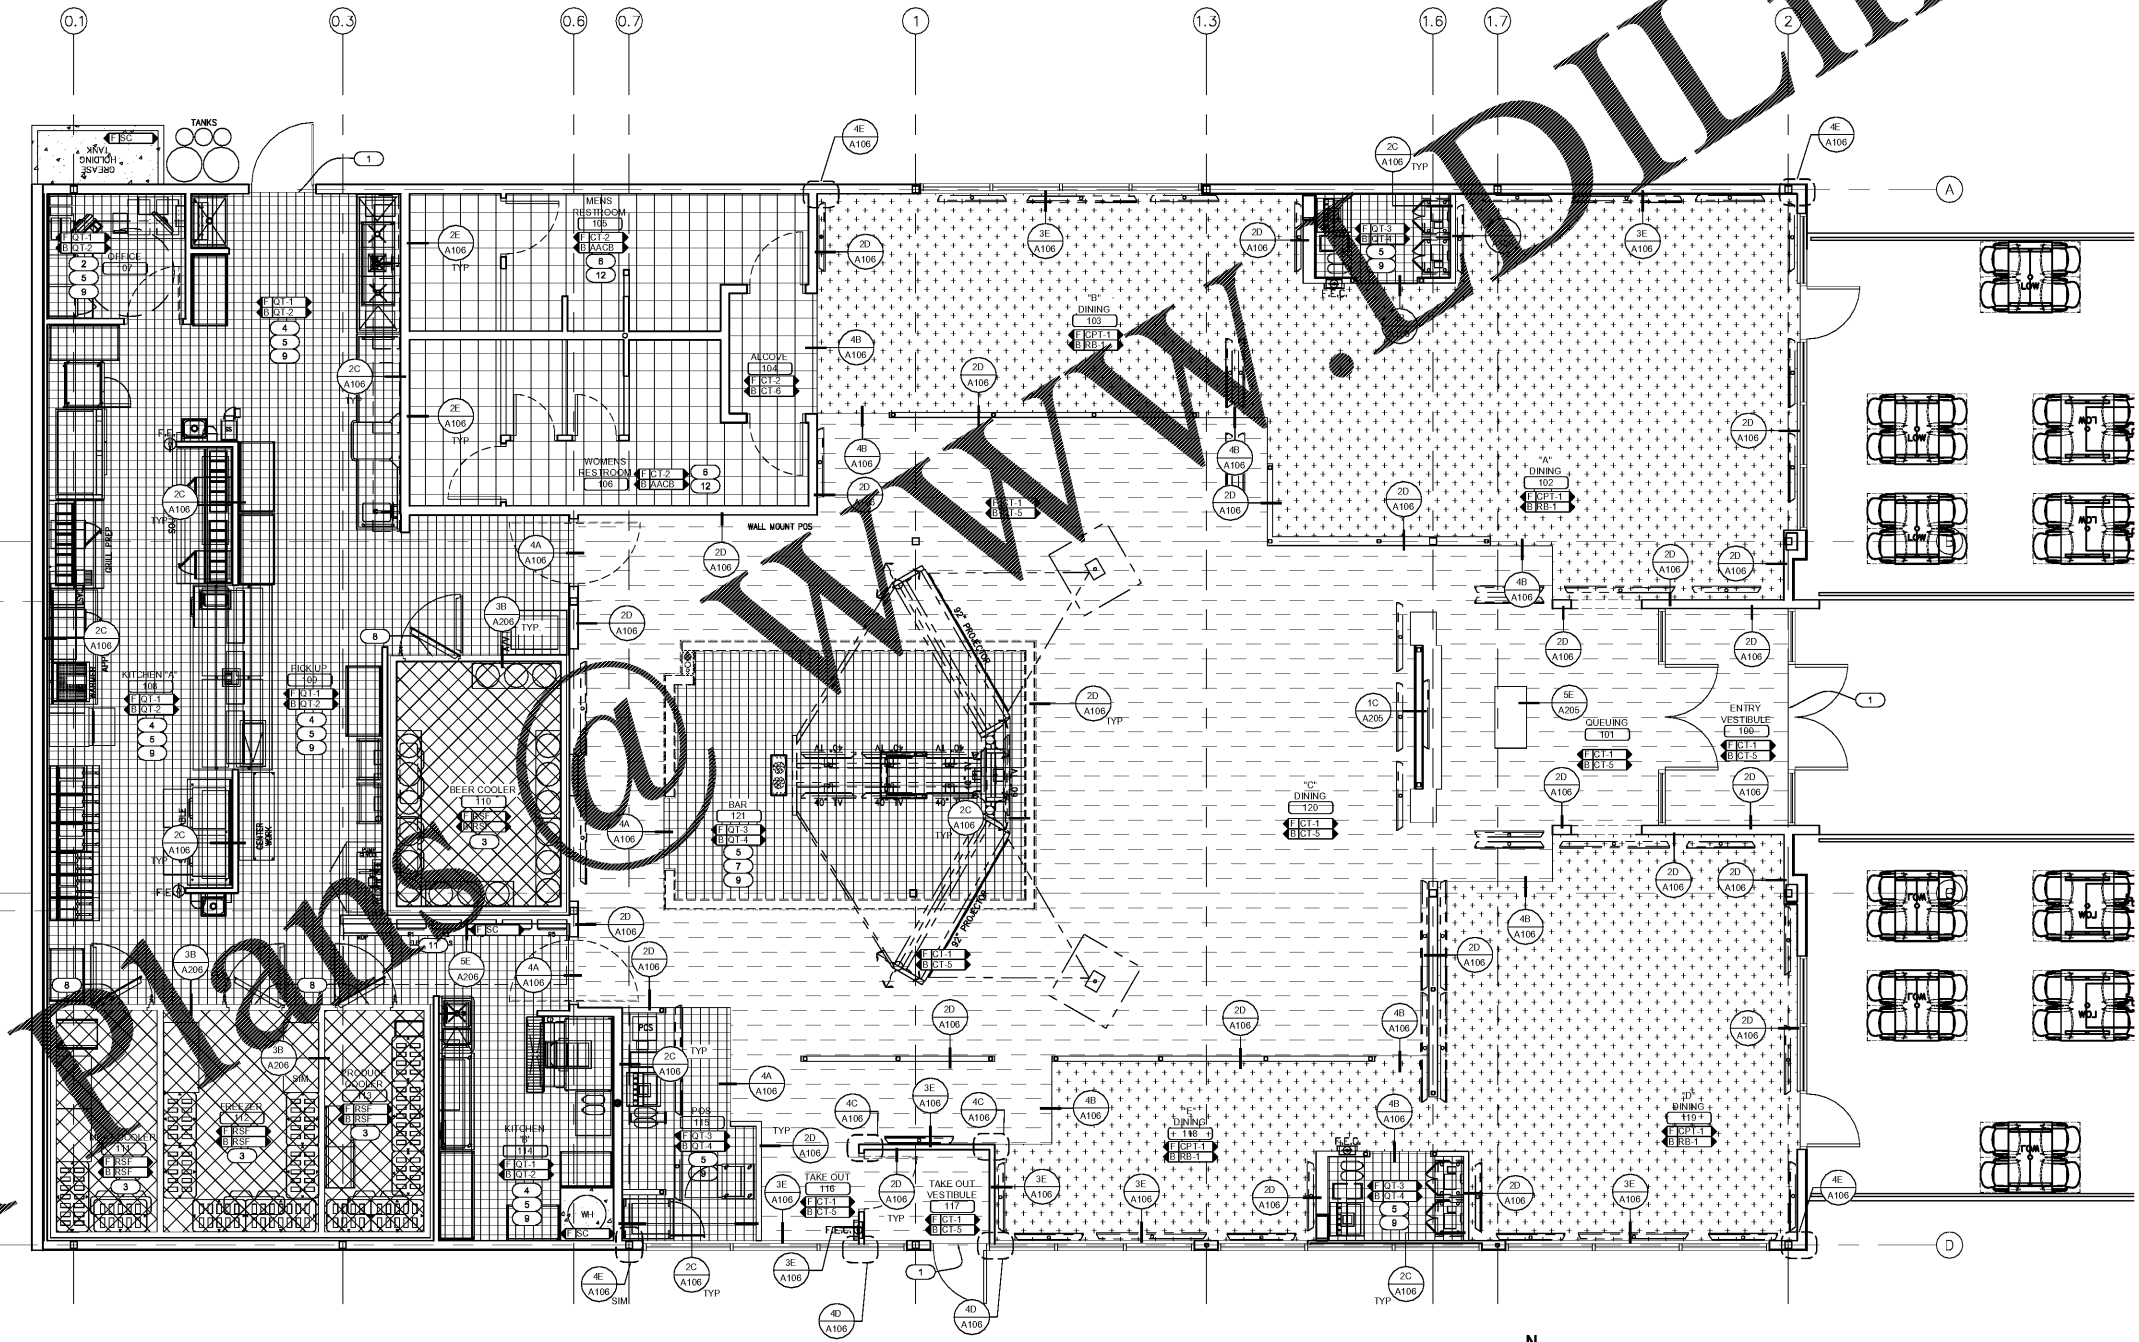

FLOOR FINISH LEGEND	
CPT-1 CARPET - BROADLOOM	SC SEALED CONCRETE
CPT-2 CARPET - TILE	QT-1 QT-3 6"x6" QUARRY TILE (QT-1) (QT-3) WITH G78 GROUT
CT-1 6"x6" CERAMIC TILE (CT-1) WITH G71 GROUT. RUN LENGTH OF TILE IN DIRECTION OF HATCH WITH 1/2" PATTERN STAGGER	CT-2 12"x12" TILE (CT2) WITH G72 GROUT
RSF RESILIENT SHEET FLOORING WITH INTEGRAL BASE	

KEY NOTES	
1	ALUMINUM DOOR THRESHOLD - REFER TO DETAILS ON SHEET A702
2	BOLT SAFE TO FLOOR/ EPOXY GROUT AROUND SAFE BASE TO FLOOR TILE
3	INSTALL RESILIENT SHEET FLOORING (RSF) IN COOLERS AND FREEZERS - SEE SHEET A206
4	STAINLESS STEEL BASE TYPICAL AT OUTSIDE CORNERS IN KITCHEN - SEE 2E/A206. REFER TO BASE DETAILS ON SHEET A206 FOR COOLER BASE REQUIREMENTS
5	EPOXY GROUT AT ALL QUARRY TILE AREAS
6	STANDARD GROUT IN RESTROOM
7	SEE 5E/A208 FOR BASE CONDITION AT BAR WALLS
8	COOLER FREEZER THRESHOLD - SEE 6B/A206
9	PROVIDE WATERPROOF MEMBRANE SYSTEM AT PERIMETER OF FLOOR AREA. MEMBRANE SYSTEM TO PROJECT UP WALL 6" AND OUT FROM WALL 16" - SEE DETAIL 2C/A106
10	NOT USED
11	3' 0" NO-STORAGE ZONE REQUIRED IN FRONT OF ELECTRICAL PANELS
12	PROVIDE WATERPROOF MEMBRANE SYSTEM AT PERIMETER OF RESTROOM FLOOR AREA. MEMBRANE SYSTEM TO PROJECT UP WALL 6" AND OUT FROM WALL 16" - SEE DETAIL 2E/A106

GENERAL NOTES	
1	SEE A106 FOR FINISH SCHEDULE
2	SEE A106 FOR WALL FINISH PLAN
3	SEE CIVIL PLANS FOR ALL EXTERIOR PAVING AT DOORS
4	SET FLOOR DRAINS FLUSH WITH TOP OF FINISH TILE FLOOR OR SEALED CONCRETE. SEE PLUMBING
5	FLOORING CONTRACTOR IS RESPONSIBLE FOR FLOOR PREP NECESSARY FOR NEW FLOORING
6	SEAL ALL CONTROL JOINTS. SEE SPEC FOR TYPES AND SUBSTRATES. INSTALL ANTI-FRACTURE MEMBRANE OVER ALL CONTROL JOINTS. TYP.
7	NO EPOXY GROUT SUBSTITUTES PERMITTED
8	FLOORS TO BE INSTALLED AS TO PROVIDE POSITIVE DRAINAGE TO ALL FLOOR DRAINS
9	USE APPROVED BY MANUFACTURER ADHESIVE TO BOND THE TILE BASE TO THE WALLCOVERING, FRIP AND COOLERS
10	CARPET SEAMS ARE PROHIBITED WITHIN 4' 0" OF ANY SERVER STATION
11	DO NOT PERMIT TRAFFIC OVER FINISHED FLOOR SURFACE FOR 4 DAYS AFTER INSTALLATION
12	PROVIDE TWO LAYERS OF CRAFT PAPER OVER ALL TILE AND GROUT ON FLOORS. TAPE DOWN AND STAGGER SEAMS BY HALF THE WIDTH ON SECOND LAYER
13	NO ACID TO BE USED FOR CLEANING FLOORS AFTER INSTALLATION AND DURING CONSTRUCTION TURNOVER. USE SOAP AND WATER WITH DECK BRUSH.

FLOOR FINISH PLAN
SCALE: 1/4"=1'-0"

CERTIFICATION

PRANGER GROUP INC.
PROJECT MANAGER

PROJECT NUMBER
5748

BUFFALO WILD WINGS
BIRMINGHAM SOUTH
1416 4th AVENUE SOUTH,
BIRMINGHAM, AL 35233



DRAWING ISSUE	
NO	DATE
1	
2	
3	
4	
5	
6	
7	

Drawing Title
FLOOR FINISH PLAN

A104