

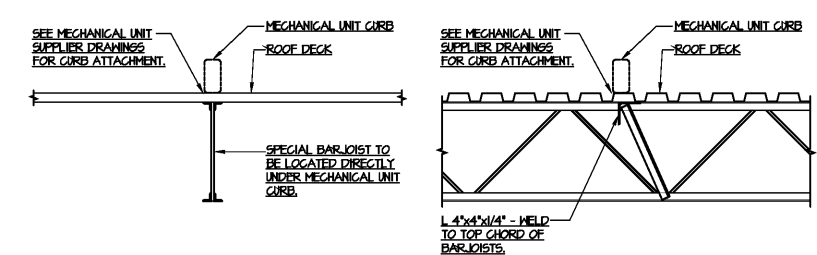
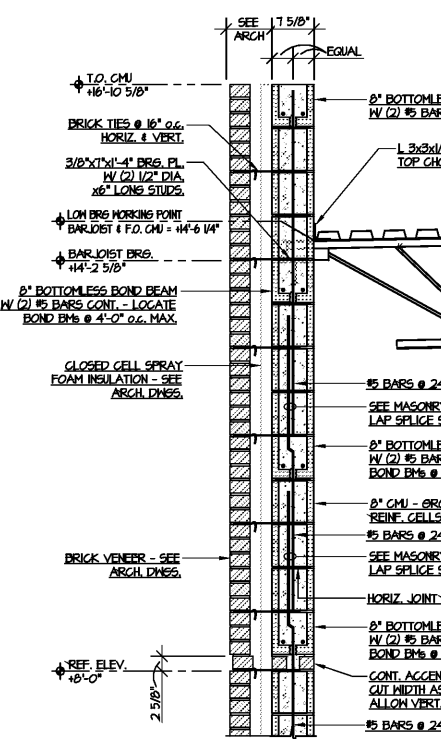


SHEET NOTES:
METAL PANELS:
SEE ARCHITECTS DRAWINGS FOR METAL WALL PANEL LOCATIONS, ELEVATIONS AND CORING OF PANELS. FOR HEAD, JAMB, SILL, INSIDE & OUTSIDE CORNER DETAILS - SEE METAL WALL PANEL MANUFACTURER'S SPECIFICATIONS FOR ATTACHMENT OF PANELS TO VERTICAL & HORIZONTAL 'Z' PURLINS.
2P x3" x16 GA. (4002P250-54)
PROVIDE ADDITIONAL PURLINS AT ENDS OF WALLS, OUTSIDE & INSIDE CORNERS, JAMBS, SILLS & HEADS OF OPENINGS - COORDINATE WITH ARCH DWS & METAL WALL PANEL MANUFACTURER'S SPECIFICATIONS. ALL WALL PURLINS (BOTH VERT. & HORIZ.) SHALL BE ATTACHED TO CMU WALL WITH (1) HILTI X-U 0.5T PAF @ 8" o.c. - PROVIDE 1" EMBED. INTO CMU


SHEET NOTE:
COORDINATE WITH ARCH DWS FOR LOCATIONS OF RUNNING BOND CMU & STACKED BOND CMU. SEE GENERAL NOTES.

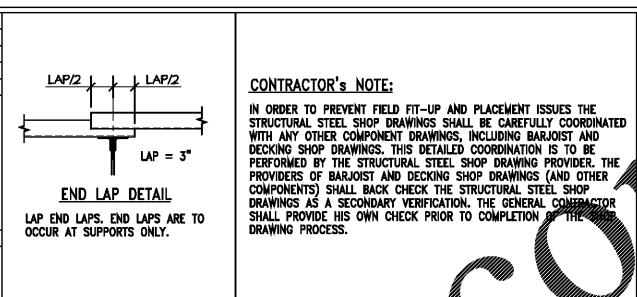


TYPICAL MECHANICAL UNIT CURB SUPPORT DETAIL

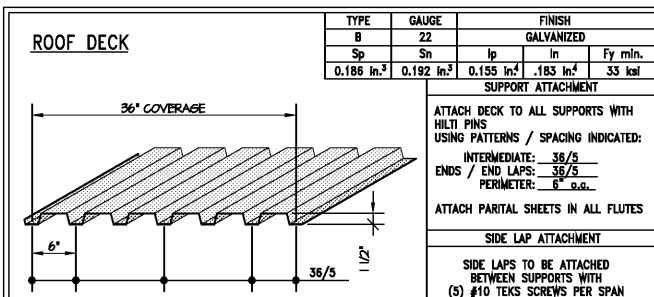


SECTION 1 S401
SCALE: 3/4\"/>

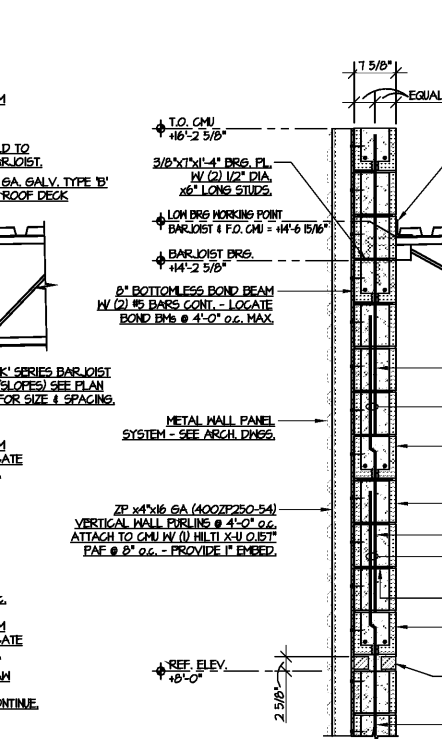


SECTION 2 S401
SCALE: 3/4\"/>

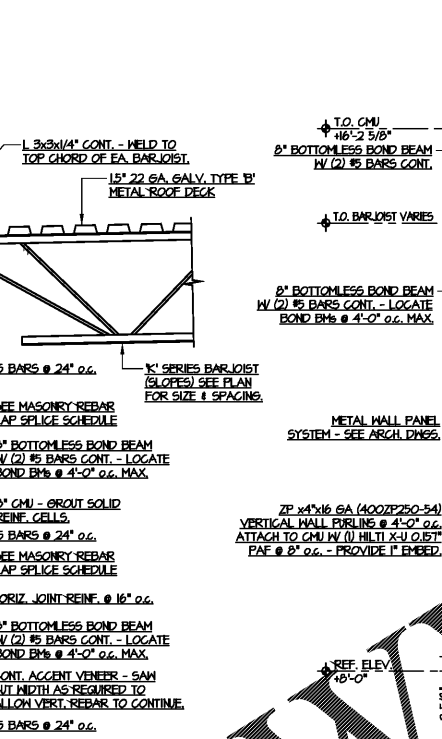


SECTION 3 S401
SCALE: 3/4\"/>

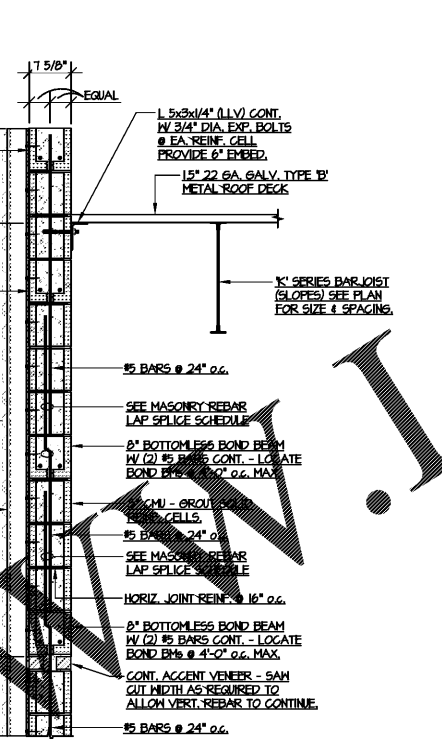


SECTION 4 S401
SCALE: 3/4\"/>

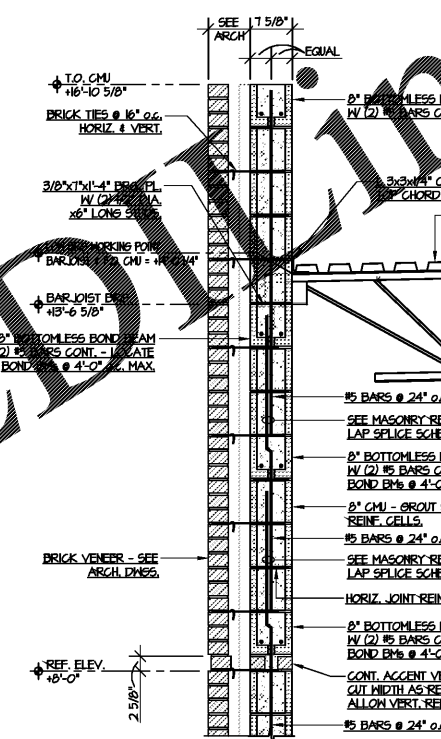


SECTION 5 S401
SCALE: 3/4\"/>

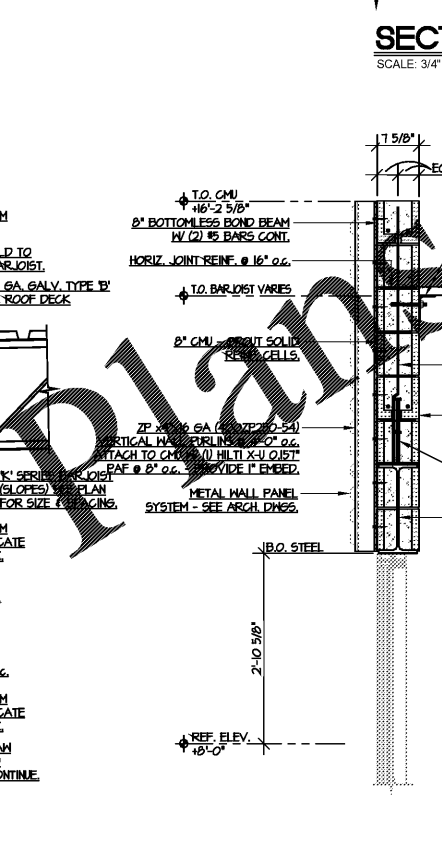

SECTION 6 S401
SCALE: 3/4\"/>

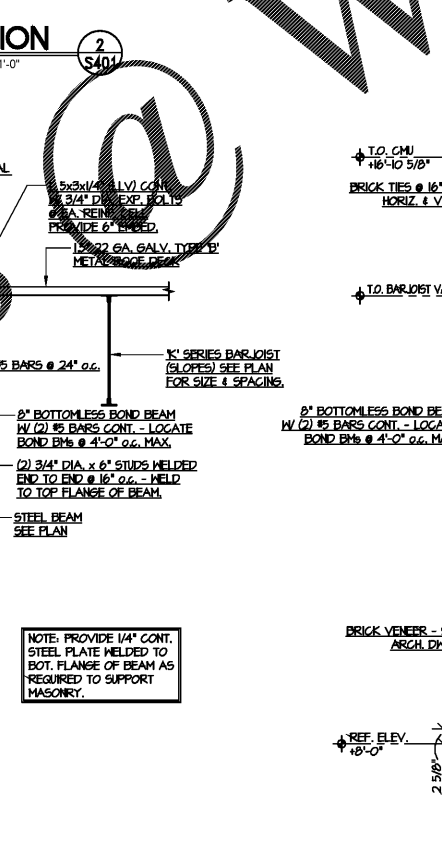


SECTION 7 S401
SCALE: 3/4\"/>

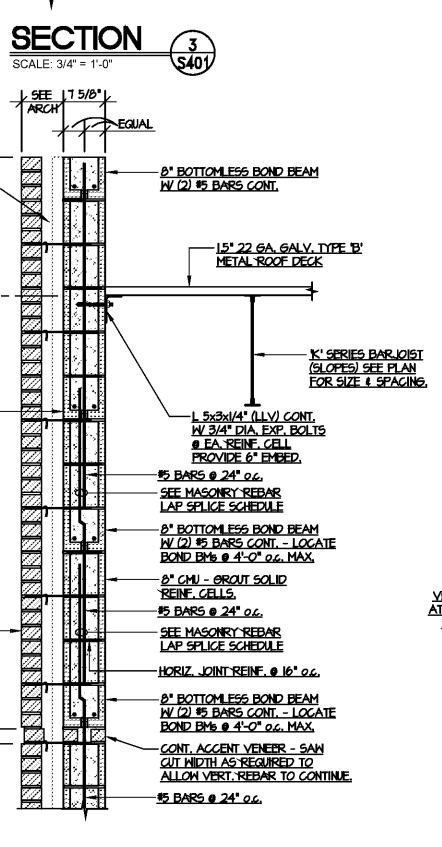


SECTION 8 S401
SCALE: 3/4\"/>

SHEET NOTE:
VERIFY ALL TOP OF CMU PARAPET ELEVATIONS & ALL B.O. OF STEEL ELEVATIONS AT LINTELS OVER CMU OPENINGS WITH ARCH DWS.


NOTE: PROVIDE 1/4\"/>

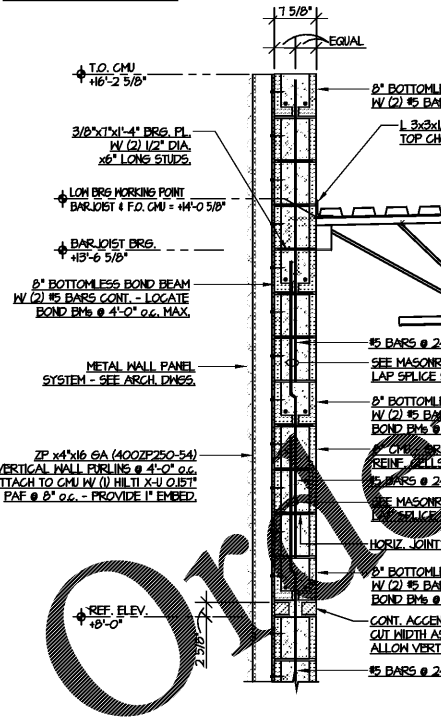


SECTION 9 S401
SCALE: 3/4\"/>

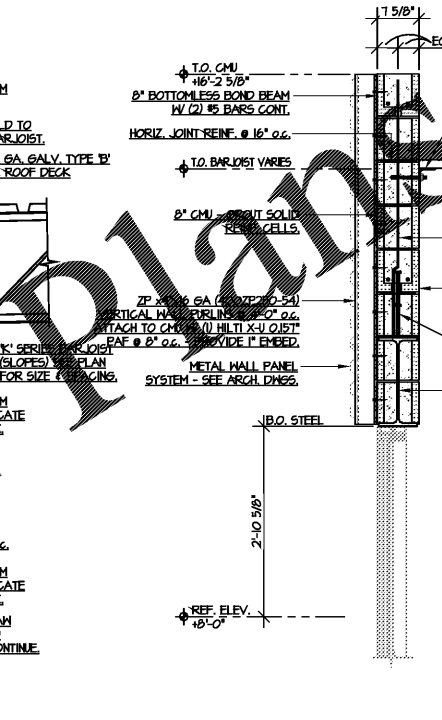


SECTION 10 S401
SCALE: 3/4\"/>

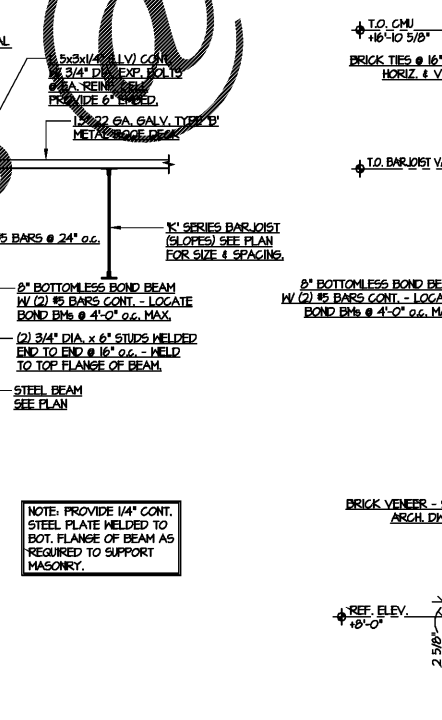

SECTION 11 S401
SCALE: 3/4\"/>

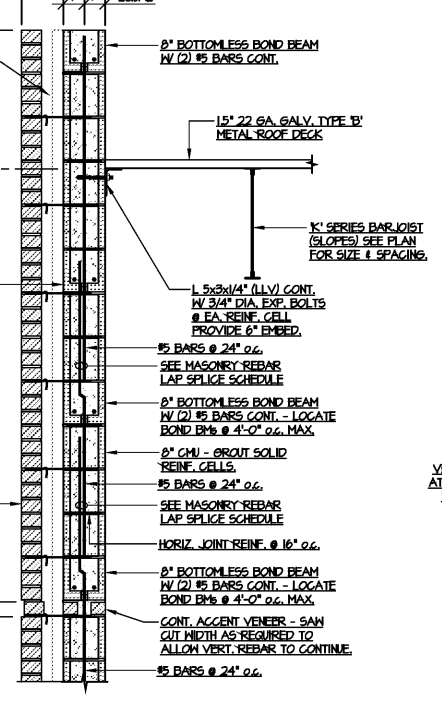

SECTION 12 S401
SCALE: 3/4\"/>

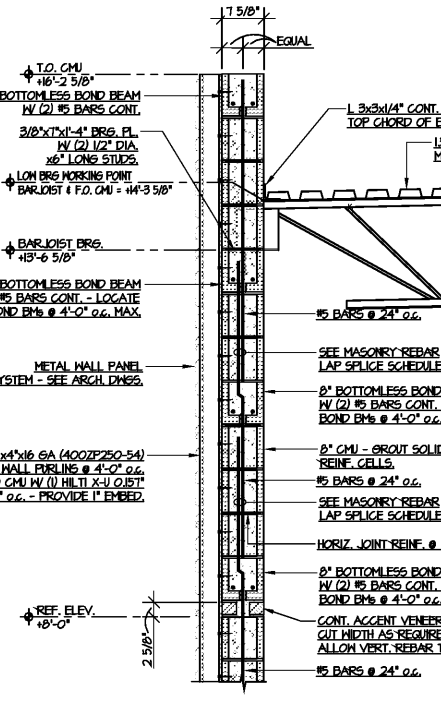

SECTION 13 S401
SCALE: 3/4\"/>