



**1 SOD DETAIL**  
L1.2 SCALE: 3/4" = 1'-0"


**2 NOT USED**  
L1.2 SCALE: NTS

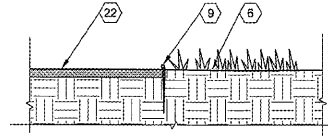


**3 MULCH DETAIL**  
L1.2 SCALE: 3/4" = 1'-0"

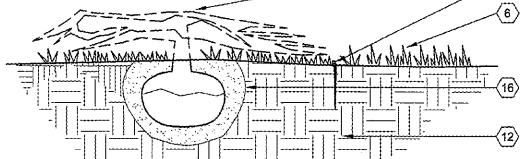

**4 SMALL SHRUB DETAIL**  
L1.2 SCALE: 3/4" = 1'-0"

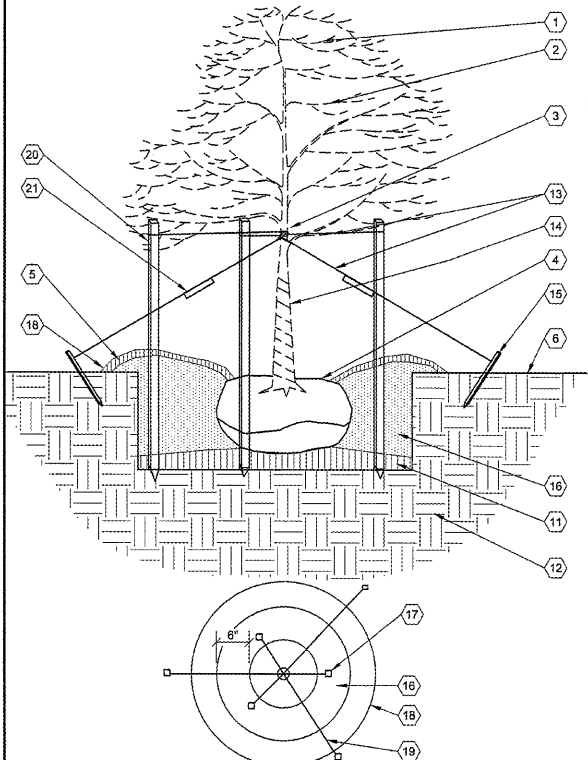

**5 LARGE DECIDUOUS TREE**  
L1.2 SCALE: 3/4" = 1'-0"

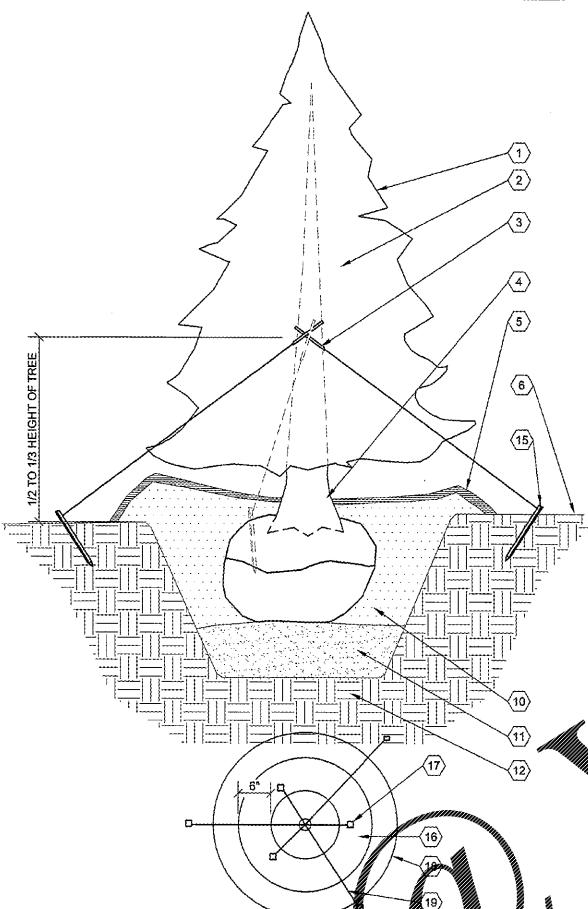

**6 LARGE CONIFEROUS TREE**  
L1.2 SCALE: 3/4" = 1'-0"

**GENERAL NOTES**

- (A) REFER TO PROJECT MANUAL AND SCOPE OF WORK SCHEDULE FOR ADDITIONAL REQUIREMENTS.
- (B) REFER TO LANDSCAPE PLAN FOR PLANTING TYPES AND LOCATIONS.
- (C) COORDINATE WORK WITH OTHER SITE RELATED DEVELOPMENT DRAWINGS.

**KEY NOTES**

- (1) PLANTING, REFER TO PLANTING SCHEDULE FOR TYPES.
- (2) SET TREE LEV. AND PLUM. STRAIGHTEN AFTER SETTLEMENT IF NEEDED.
- (3) ENCASE WIRE AROUND TRUNK IN BLACK RUBBER. MOVE UP ABOVE EQUAL TO 1/3 OF THE HEIGHT OF TREE.
- (4) SET TREE WITH TOP 1/3 OF ROOT ABOVE FINISH GRADE.
- (5) REFER TO LANDSCAPE PLAN FOR GROUND COVER TYPE AND LOCATIONS. PROVIDE 3" DEEP 5/8" CREEK GRAVEL OVER BLACK 4 MIL VISQUEEN VAPOR BARRIER OR 3" SHREDDED CYPRESS MULCH OVER BLACK 4 MIL VISQUEEN VAPOR BARRIER.
- (6) LAWN
- (7) REFER TO SITE GRADING PLAN FOR SLOPE. PLACE THREE PINS EVERY 2'-0", SPACING EQUALLY. SOD SHALL BE COMPOSED OF TWO VARIETIES MINIMUM OF FESCUE GRASS.
- (8) NOT USED.
- (9) 4" BLACK POLY VINYL EDGING
- (10) PREFERRED SOIL
- (11) COMPACTED PLANTING
- (12) SUB GRADE
- (13) TWO STRANDS OF WIRE
- (14) TRUNK WRAP
- (15) 2" X 2" X 10" WOOD STAKES BURY BELOW FINISH GRADE
- (16) PREPARED PLANTING MIXTURE.
- (17) TREES 6'-0" IN HEIGHT OR LESS SHALL BE STAKED
- (18) EXTENTS OF PLANTING BERM TO HOLD WATER
- (19) TREES TALLER THAN 3'-0" MUST BE TIED.
- (20) 2" X 4" STAKE - OR - METAL FENCE POST
- (21) 1" X 4" X 10" WHITE WOOD FLAG
- (22) 3" DEEP SHREDDED CYPRESS MULCH OVER BLACK VISQUEEN VAPOR BARRIER.



1736 East Sunshine, Suite 100  
Springfield, Missouri 65804  
417.862.9558  
Fax: 417.862.9268  
e-mail: architect@esterichneider.com

**ESTERICH SCHNEIDER & ASSOCIATES, INC.**  
architects & planners  
AIA

PROJECT:  
NEW O'REILLY AUTO PARTS STORE  
U.S. HWY 231  
MURFREESBORO, TN #5  
LANDSCAPE DETAILS

**O'Reilly AUTO PARTS**  
CORPORATE OFFICES  
233 SOUTH PATTERSON  
SPRINGFIELD, MISSOURI 65802  
(417) 862-2674 TELEPHONE

COMM #	4219
DATE:	8-17-18
REVISION	
DATE:	

Order Plans

WWW.LDILINE.COM