


KEY NOTES:

- 1 DISHWASHER - FURNISH AND INSTALL A 100A/3P/FUSE/RIT DISCONNECT SWITCH AND CONNECT TO THE 208/3 VOLT DISHWASHER (SINGLE POINT CONNECTION FOR THE HEATERS AND MOTORS). COORDINATE THE EXACT LOCATION OF THE UNIT WITH THE KITCHEN CONSULTANTS DRAWINGS AND ARCHITECT PRIOR TO ROUGH-IN.
- 2 COMBI OVEN - 208/3 VOLTS, 50A RECEPTACLE. COORDINATE THE EXACT OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. INTERLOCK THE SHUNT TRIP CIRCUIT TO THE HOOD FIRE SUPPRESSION SYSTEM. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 3 ICE MACHINE, 20A, 120 VOLT OUTLET. COORDINATE THE EXACT LOCATION OF THE OUTLET, MOUNTING HEIGHT AND OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 4 WALL MOUNT THE RECEPTACLE AT 48" ABOVE THE FINISHED FLOOR.
- 5 FRIG, 20A, 120 VOLT OUTLET AT 18" ABOVE THE FINISHED FLOOR. COORDINATE THE EXACT LOCATION OF THE OUTLET AND OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 6 MILK COOLER, 20A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 7 HEATED PASS THROUGH CABINET, 20A, 208/1 VOLT, 50A RECEPTACLE AT 48" ABOVE THE FINISHED FLOOR. COORDINATE THE EXACT LOCATION OF THE OUTLET AND OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 8 COLD FOOD COUNTER, 20A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 9 HOT FOOD COUNTER, 30A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 10 FOOD PREPARER, 20A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 11 HOLDING CABINET, 20A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 12 VENTLESS FRYER - FURNISH AND INSTALL A 100A/3P/FUSE/RIT DISCONNECT SWITCH AND CONNECT TO THE 208/3 VOLT UNIT. COORDINATE THE EXACT LOCATION OF THE UNIT WITH THE KITCHEN CONSULTANTS DRAWINGS AND ARCHITECT PRIOR TO ROUGH-IN. INTERLOCK THE SHUNT TRIP CIRCUIT TO THE HOOD FIRE SUPPRESSION SYSTEM. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 13 FREEZER, 20A, 120 VOLT OUTLET AT 18" ABOVE THE FINISHED FLOOR. COORDINATE THE EXACT LOCATION OF THE OUTLET AND OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 14 CASHIER, 20A TWIST LOCK 120 VOLT CEILING MOUNTED OUTLET. REFER TO THE KITCHEN EQUIPMENT WIRING DIAGRAM THIS SHEET FOR ADDITIONAL INFORMATION. COORDINATE THE EXACT LOCATION OF THE OUTLET WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT. FURNISH AND INSTALL A CEILING MOUNTED DATA OUTLET ADJACENT TO THE RECEPTACLE WITH A 1" CONDUIT AND PULL ROPE TO THE CABLE TRAY AND TO ABOVE THE KITCHEN OFFICE.
- 15 HOT CABINET, 20A, 120 VOLT OUTLET AT 18" ABOVE THE FINISHED FLOOR. COORDINATE THE EXACT LOCATION OF THE OUTLET AND OUTLET CONFIGURATION WITH THE KITCHEN SHOP DRAWING PRIOR TO ROUGH-IN. FURNISH AND INSTALL A NEW HEAVY DUTY CORD AND PLUG AND CONNECT TO THE NEW EQUIPMENT.
- 16 FURNISH AND INSTALL THE SPECIFIED TWIST LOCK RECEPTACLE FLUSH IN THE CEILING. FURNISH AND INSTALL UNISTRUT SUPPORTS TO ANCHOR THE DEVICE IN THE CEILING FROM THE STRUCTURE.
- 17 MAINTAIN THE EXISTING ELECTRICAL CIRCUIT FOR THE SERVING EQUIPMENT. REFER TO THE KITCHEN PLANS QF400 FOR ADDITIONAL INFORMATION.
- 18 FURNISH AND INSTALL POWER AND DATA FOR THE LOD SCREEN. REFER TO THE KITCHEN PLANS QF400 FOR ADDITIONAL INFORMATION.

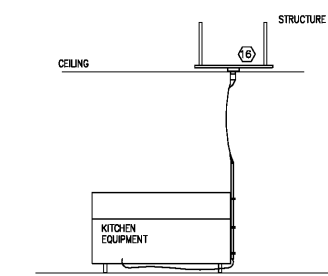

KITCHEN EQUIPMENT WIRING DIAGRAM
NOT TO SCALE

Order Plans @

01 - FIRST FLOOR - PART - B - KITCHEN POWER
1/4" = 1'-0"