


ELEVATION

SIDE DETAIL

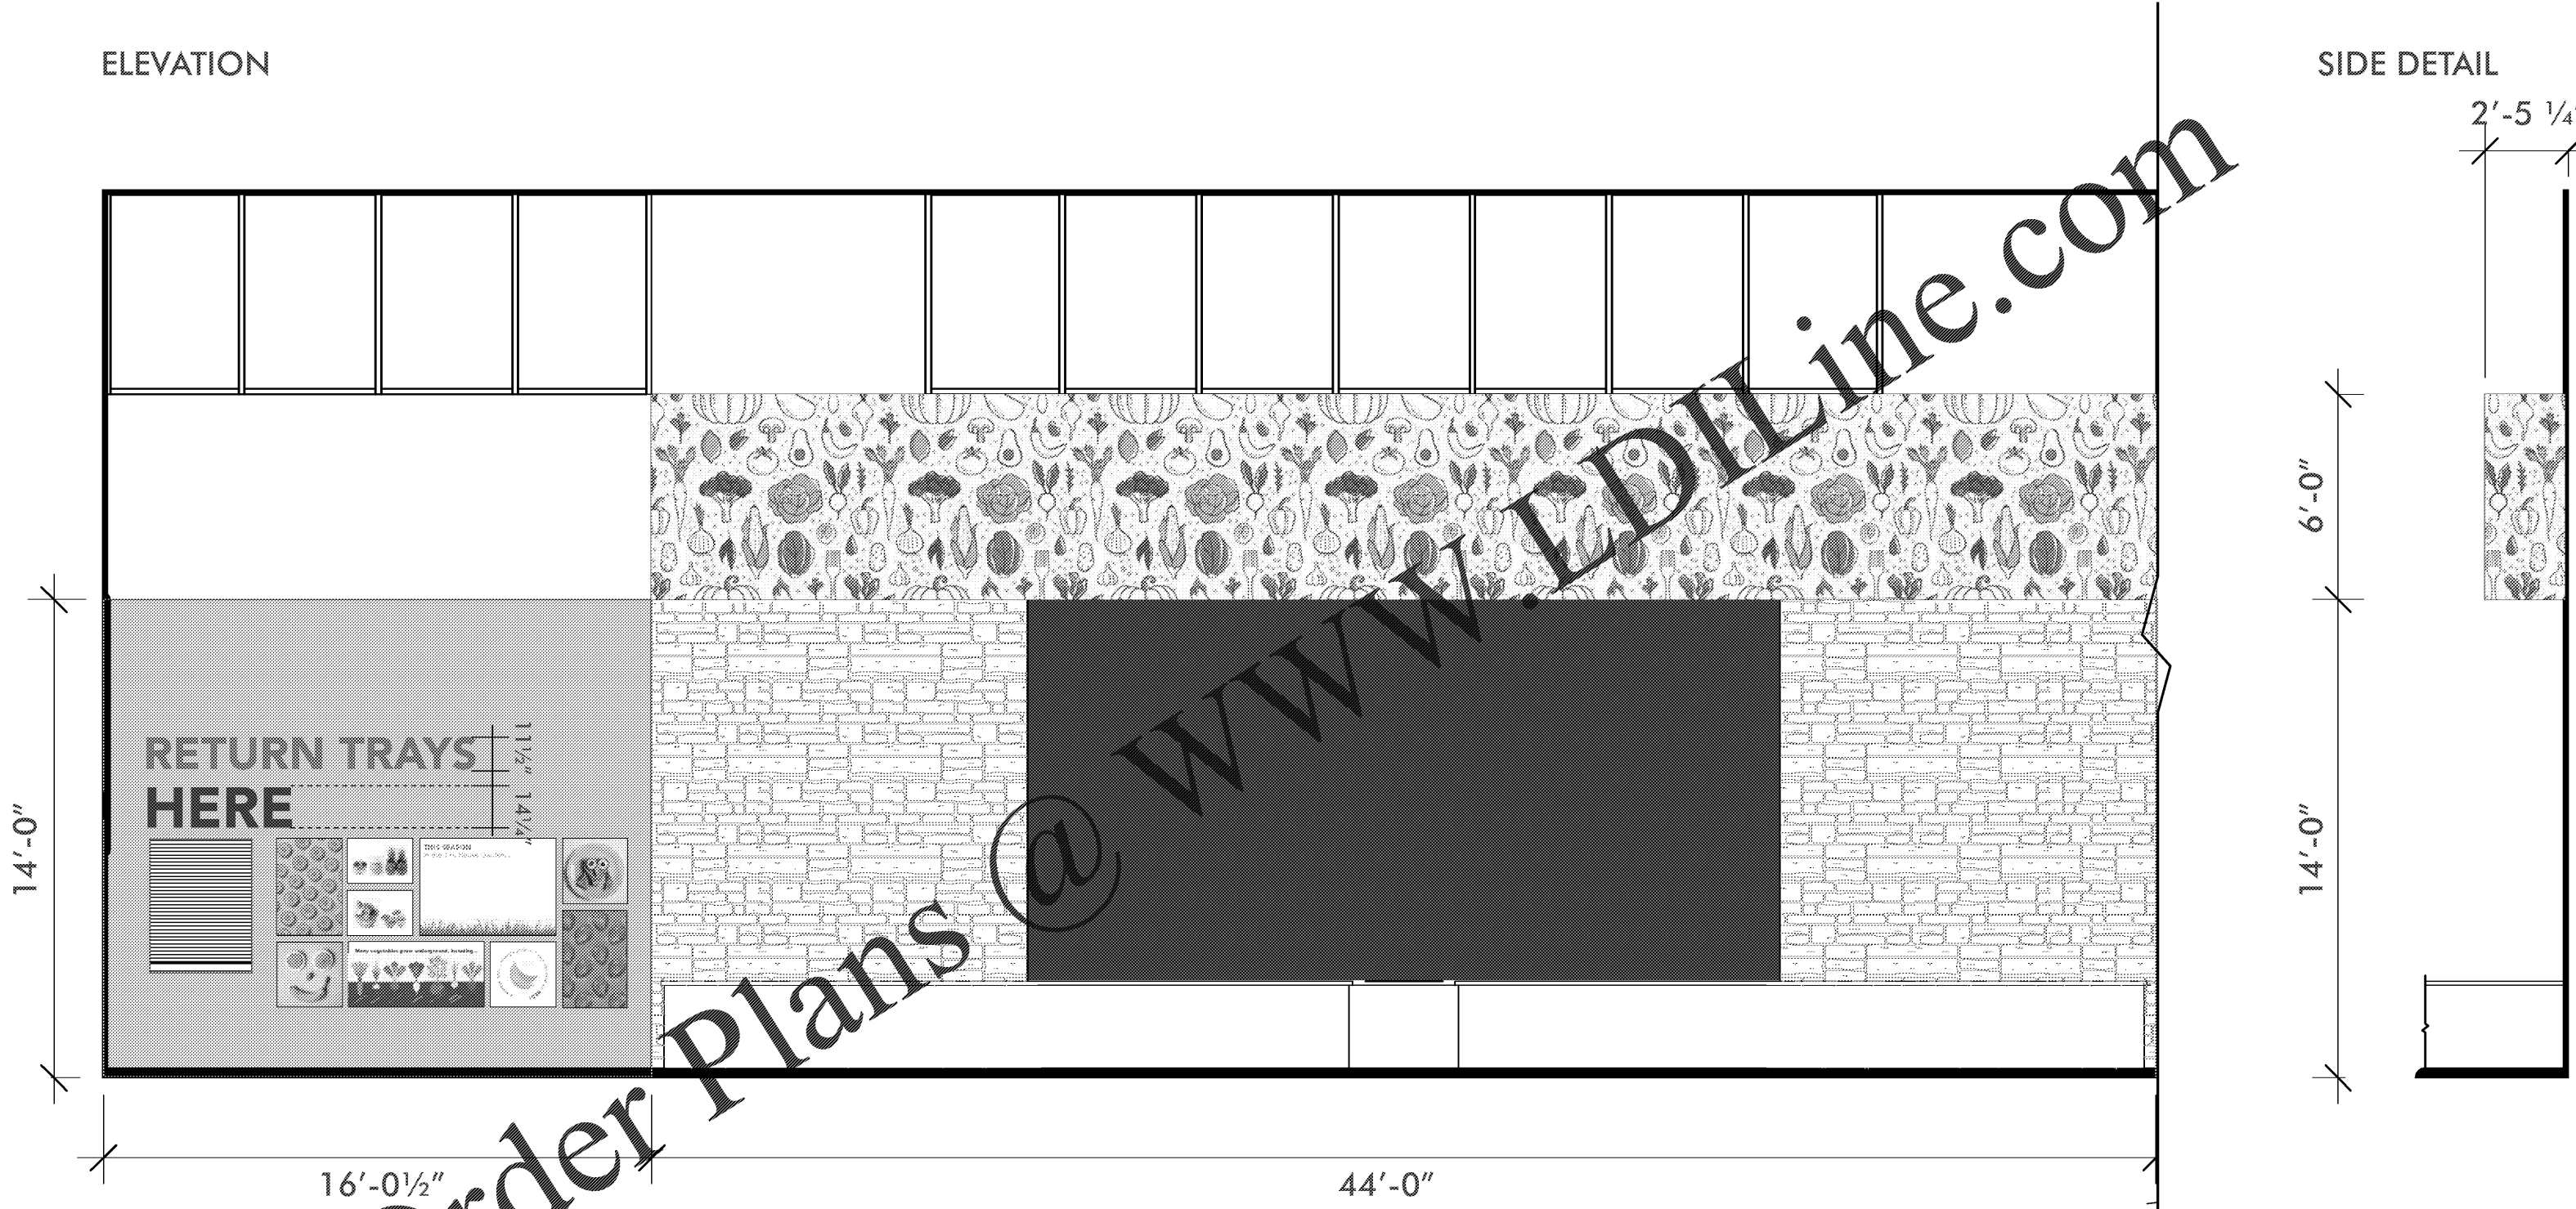

NOTE: Wallcovering should be installed based on center and then top edge. 2" provided along bottom of layout to continue behind base.