

FIRE ALARM LEGEND


- E FIRE ALARM PULL STATION
- EAA FIRE ALARM REMOTE ANNIUNCIATOR
- V W WALL MOUNTED FIRE ALARM HORN/STROBE (BOTTOM AT 80" AFF)
- C CEILING MOUNTED FIRE ALARM HORN/STROBE
- W WALL MOUNTED FIRE ALARM STROBE (BOTTOM AT 80" AFF)
- D DUCT SMOKE DETECTOR
- S FIRE ALARM SMOKE DETECTOR

FIRE ALARM NOTE

DOLLAR TREE REQUIRES A FIRE ALARM SYSTEM TO BE INSTALLED ON THIS PROJECT. THE SYSTEM SHALL INCLUDE ALL DEVICES INDICATED BY THESE PLANS, AND THE SYSTEM MUST ALSO MEET ANY ADDITIONAL FIRE MARSHAL REQUIREMENTS. INSTALLATION MUST USE FIRE ALARM PANELS SPECIFIED BELOW. ARRANGE FOR CONNECTION AND MONITORING BY VECTOR SECURITY ONLY. YOU MUST PROVIDE ONE OF THE ALARM PANELS LISTED BELOW SO THAT VECTOR SECURITY CAN MONITOR THE SYSTEM.

- A. SILENT KNIGHT 5700 - TO BE USED WHEN AHJ REQUIRES AN ADDRESSABLE PANEL.
- B. DMP XR100 - TO BE USED AS A BA/FA COMBO PANEL.
- C. BOSCH D7412GV2 - TO BE USED AS A BA/FA COMBO PANEL.
- D. MIRTONE FS100 4RD - TO BE USED AS A STANDARD FA PANEL.

CONTACT VECTOR SECURITY AT 703-469-6100. ASK FOR THE DOLLAR TREE SUPPORT TEAM AT LEAST 7 DAYS PRIOR TO THE DATE YOU NEED THE PANEL DOWNLOADED SO WE CAN ASSIGN AN ACCOUNT MANAGER. YOU WILL NEED TO PROVIDE ZONE INFORMATION AND VERIFY CORRECT SIGNALS ARE BEING RECEIVED PRIOR TO INSPECTIONS BY THE FIRE MARSHAL.

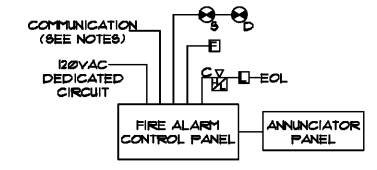

FIRE ALARM NOTES:

1. THE FIRE ALARM CONTROL PANEL SHALL HAVE A BATTERY BACKUP THAT PROVIDES A MINIMUM OF 24 HOURS OF OPERATION IN STANDBY MODE PLUS 5 MINUTES IN ALARM.
2. THE FIRE ALARM SYSTEM SHALL HAVE A DIGITAL COMMUNICATOR THAT IS CONNECTED TO A UL APPROVED CENTRAL STATION. THE COMMUNICATOR SHALL BE PROVIDED WITH TWO TELEPHONE LINES.
3. SEE PLANS FOR DEVICE QUANTITIES AND LOCATIONS.

FIRE ALARM RISER

SCALE: NONE

FIRE ALARM PLAN
 SCALE: 1/8"=1'-0"
 NORTH

Order Plans @ WWW.LDPLine.com

| | |
|---|-------------------------------------|
| | |
| | COLUMBUS, GA FIRE ALARM PLAN |
| 3901 SPRING HILL AVENUE MOBILE, ALABAMA 36608 (251) 344-7972 / FAX (251) 345-9179 | PROJ. NO. 605617 DWG. NO. E-12 |