Inlet Sediment Trap Sd2

DEFINITION

A temporary protective device installed at or around an inlet to a storm drain to trap sediment.

PURPOSE

To prevent sediment from entering a storm drainage system prior to permanent stabilization of the disturbed area and laying to the inlet.

CONDITIONS

All storm drain drop inlets that receive runoff from disturbed areas.

DESIGN CRITERIA

The inlet trap shall have two sets different, collapsible, flow retention and high flow supported. In areas where DBPs are being used on paved surfaces, as safety is a concern, the potentially negative effects of ponding should be taken into account. In such cases, a high flow bypass is preferred.

On unpaved areas where ponding will not cause a safety hazard, high retention would be taken into account. If high retention is not used in the situation a rollerball shall be given on the area and an unpaved application should apply.

Sediment traps must be self-draining unless they are otherwise protected in an approved manner that will not prevent a safety hazard. The drainage area addressing the inlet sediment trap shall be no greater than one acre.

If runoff may bypass the protected inlet, a temporary dike should be constructed on the down slope side of the inlet(s). Also, a more

GSWCC 2016 Edition

view drop may be used on the up slope side of the inlet to slow runoff and filter larger soil particles. Refer to **Fb Silt-type Filter Bag.**

CONSTRUCTION SPECIFICATIONS

Customized Inlet Sediment Trap

An excavation may be installed around the inlet sediment trap to provide additional sediment storage. The trap shall be sized to provide a minimum storage capacity calculated at the rate of 67 cubic yards per acre of disturbed area. A minimum depth of 1.5 feet for sediment storage should be provided. Side slopes shall not be steeper than 2:1.

Sediment traps may be constructed on over-top ground surface, on an excavated surface, or on multiple compacted fill, provided they have a non-erosible outlet.

Filter Fabric with Supporting Frame Sd2-F

This method of inlet protection is appropriate where the drain area is relatively flat area, slope no greater than 5%, and inlet has no ability to receive concentrated flows, such as in street or highway medians. As shown in Figure 6-25.1, Type S with fence supported by steel posts should be used. The posts shall be spaced evenly around the perimeter of the inlet a maximum of 3 feet apart, and securely embedded into the ground approximately 18 inches deep. The fabric shall be 36 inches tall and unreinforced. Fabrics are backfilled with crushed stone or compacted soil. Fabric and wire shall be securely fastened to the posts, and fabric ends must be overlapped a minimum of 18 inches or wrapped together. Silt fence is not to provide a continuous fabric barrier around the inlet.

Baffle Box Sd2-B

Flat inlets normally consist with a higher will area or velocity, a baffle box and overflow weir should be used. As shown in Figure 6-25.2, the baffle box shall be constructed of 2" x 4" boards spaced a maximum of 1 inch apart on all pipework with wire fabric 2 inches in diameter. The wood holes shall be placed approximately 2 inches on center vertically and horizontally. Gravel shall be placed inside the box, all around the inlet, to a depth of 2 to 4 inches. The gravel used is assigned

GSWCC 2016 Edition

CURB INLET FILTER "PIGS IN BLANKET"

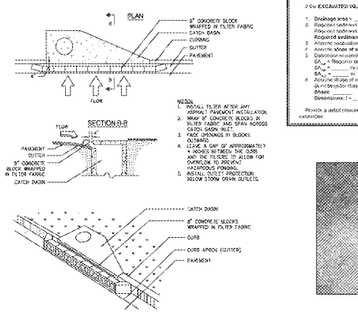

Figure 6-25.3 Curb Inlet Filter "Pigs in Blanket"

GSWCC 2016 Edition

TO BE SHOWN ON THE EROSION AND SEDIMENT CONTROL PLAN

2 for EXCAVATED INLET SEDIMENT TRAPS shall show the following information:

1. Drainage area = ____ ac
2. Required sediment storage = ____ cy/ac drainage area
   Required sediment storage = ____ cy
   Required sediment storage = ____ cy
3. Assume sediment storage = ____ cy/ac = ____ cy
4. Assume side slopes of ____ (Vertical) to ____ (Horizontal)
5. Assume bottom width = ____ ft
6. Assume depth of trap = ____ ft (Maximum depth = ____ ft)
   SA_{bottom} = ____ sq ft
   SA_{top} = ____ sq ft
   $SA_{required}$ = ____ sq ft
7. Show dimensions of inlet and perimeter dimensions.
8. Show cut and fill slopes with a 2:1 height to width ratio or less (concrete).

Provide a detail showing the depth, length and width, or diameter (if applicable), and side slopes of the excavation.

GSWCC 2016 Edition

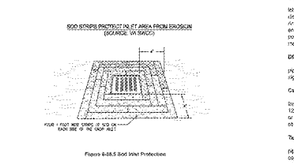

Figure 6-26.1 Equivalent Inlet Sediment Trap

Figure 6-26.2 Gravel Drop Inlet Protection

Storm Drain Outlet Protection St

DEFINITION

Paved and/or energy-dissipated conduits placed below storm drain outlets.

PURPOSE

To reduce velocity of flow before entering receiving channels and prevent scour.

CONDITIONS

This standard applies to all storm drain outlets, inlet channels, paved channel downchutes, dissipating the kinetic energy of concentrated flows. Adequate velocity treatment is needed from the point of entry into an existing stream or publicly maintained drainage system.

DESIGN CRITERIA

Detailed by design engineer. All outlets of pipes and paved channel conveyors shall be designed according to the following criteria:

Capacity

Peak discharge from the 25-year, 24-hour frequency storm or the storm specified in Title 12-7.1-11 of the Georgia Code, whichever is the greater discharge of the storm water conveyance structure, whichever is greater.

Tailwater Depth

The depth of tailwater immediately below the pipe outfall may be considered for the design capacity of the pipe. Generally it is better may be easy to maintain if tailwater depth is less than half the diameter of the outlet pipe. If otherwise described as a Minimum Tailwater Condition. If the tailwater depth is greater than half the pipe diameter, it shall be considered as a

GSWCC 2016 Edition

Maximum Tailwater Condition. Where pipe outlet flow exists with no defined channel may be assumed to have a Minimum Tailwater Condition.

Apron Length and Thickness

The apron length and d_o, more median size, shall be determined from the graphs and tables using to tailwater conditions.

Minimum Tailwater - Use Figure 6-34.1

Maximum Tailwater - Use Figure 6-34.2

Maximum Stone Size = 1.5 x d_{50}

Apron Thickness = 1.5 x stone

Apron Width

If the pipe discharges directly into a well-defined channel, the apron shall extend across the channel bottom and up the channel banks to an elevation not less above the maximum tailwater depth or the top of the bank, whichever is less. If the pipe discharges into a flat area with no defined channel, the width of the apron shall be determined as follows:

a. The upstream end of the apron, adjacent to the pipe, shall have a width three times the diameter of the outlet pipe.

b. For a Minimum Tailwater Condition, the downstream end shall have a width equal to the pipe diameter plus the length of the apron. Refer to Figure 6-34.1.

c. For a Maximum Tailwater Condition, the downstream end shall have a width equal to the pipe diameter plus 0.4 times the length of the apron. Refer to Figure 6-34.2.

Bottom Grade

The apron must be constructed with no slope along its length (0.0% grade). The lowest elevation of the downstream end of the apron shall be set equal to the elevation of the outlet receiving channel. There shall be no invert at the end of the apron.

Side Slope

If the pipe discharges into a well-defined channel, the side slopes of the channel shall not be steeper than 2:1

GSWCC 2016 Edition

Alignment

The apron shall be located so that there are no bends in the horizontal alignment.

Geotextile

Geotextiles should be used as a separator between the graded stone, the soil base, and the abutment. The geotextile will prevent the migration of soil particles through the voids of the graded stone. The geotextile shall be specified in accordance with AASHTO M288-09 Section 8, Geotextile Property Requirements. The geotextile should be placed immediately adjacent to the subgrade without any voids.

Materials

The apron may be lined with riprap, grouted riprap or concrete. The minimum stone for riprap, d_{50}, shall be determined from the curves. Figures 6-34.1 and 6-34.2, according to the tailwater condition. The gradation, quality and placement of riprap shall conform to Section 500.

Refer to Figure 6-34.4, for alternative structures for achieving energy dissipation at an outlet. For a demonstration program, the Georgia Soil and Water Conservation Commission may designate certain structures as experimental. Refer to Publication "Guidelines for Outlets and Channels," IMC No. 14, FHWA, available from the Superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.

CONSTRUCTION SPECIFICATIONS

1. Ensure that the subgrade for the riser and riprap apron has the required lines and grades before the start. Compact any fill required in the subgrade to the density specified for the surrounding undisturbed material. Low areas and/or areas excavated in the subgrade by mistake shall be filled by thoroughly compacting the fill.
2. The riprap and paved outlet may not commence until the upstream drainage is stabilized, unless approved by the plan approving agency.
3. Construct the apron to plan grade with no projections or depressions which would interfere with the design flow.
4. Excavate the apron on plan grade with no overcut in the area. Make the top of the riprap at the downstream end level with the receiving channel and level with the bottom for a depth of twice the maximum stone size.
5. Ensure that the apron is properly aligned with the receiving stream and preferably straight throughout its length. If a curve is needed to fit the conditions, place it in the upper section of the apron.
6. Immediately after construction, stabilize all disturbed areas with vegetation.
7. Stone quality - Select stone for riprap from hard rock or quarry stone. The stone should be hard, angular, and highly weather resistant. The specific gravity of the individual stones should be at least 2.5.
8. Filter - Install a filter to prevent the piping through the openings in the riprap. Use a graded course of gravel or crushed stone over the soil or a synthetic filter cloth. See Figure 6-34.1.

MAINTENANCE

Inspect riprap outlet structures periodically, making sure that stones have not been displaced by the force of water and that erosion has not undermined the structure. Immediately make all needed repairs to avoid further damage.

GSWCC 2016 Edition

RIPRAP OUTLET PROTECTION

PIPE OUTLET TO FLAT AREA -- NO WELL DEFINED CHANNEL

NOTES:
1. d_{50} IS THE LENGTH OF THE RIPRAP APRON.
2. $D = 1.5$ TIMES THE MAXIMUM STONE DIAMETER BUT NOT LESS THAN 6".
3. IN A WELL-DEFINED CHANNEL, EXTEND THE APRON UP THE CHANNEL BANKS TO AN ELEVATION OF D_{MAX} OR MINIMUM TAILWATER DEPTH OR TO THE TOP OF THE BANK (WHICHEVER IS LESS).
4. A FILTER BLANKET OR FILTER FABRIC SHOULD BE INSTALLED BETWEEN THE RIPRAP AND THE SOIL FOUNDATION.

PIPE OUTLET TO WELL DEFINED CHANNEL

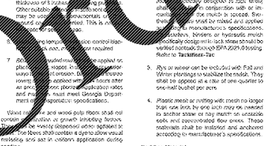

Figure 6-34.3 - Riprap Outlet Protection (Modified From Va SWCC)

GSWCC 2016 Edition

Tree Protection Tr

DEFINITION

To protect existing trees from injury during construction activity.

PURPOSE

To ensure the survival of desirable trees when they will be affected by erosion and sedimentation, watershed protection, landscape beautification, dust and pollution control, noise reduction, shade and other environmental benefits while the land is being converted from forest or other land cover to developed uses.

CONSTRUCTION ACTIVITIES

There can be damaged or killed by a wide variety of construction activities. Chopping injuries such as broken branches or torn bark destroy the tree's resources and provide entry points for insects, or for diseases such as Oak Wilt.

The wood damage, however, often remains hidden underground. Roots are one of the most important of a tree. They are responsible for nutrient and water uptake, energy storage and anchoring the plant. It is critical that any activity took that is in the path of construction.

Soil compaction is the leading killer of urban trees. Tree roots need loose soil to grow, obtain oxygen, and absorb water and nutrients. Steel-tracked equipment, heavy machinery and excessive foot traffic all damage soil structure. Lacking good soil structure, roots suffocate and tree health declines.

Requirement for Regulatory Compliance

Many cities and counties in Georgia have tree protection specifications written in their local ordinances. In some areas a permit is required to remove trees with a specified diameter. It is important for property owners and design professionals to contact the local governmental to obtain information regarding tree ordinances BEFORE ESAPC plans are designed. Failure to do so could result in heavy fines or delay in construction.

DESIGN CRITERIA

No formal design is required. However, in planning, a number of various must be considered:

Tree Protection Zones:

1. Measure the diameter of the tree trunk in inches at 4.5 feet from the ground. This is called a "Diameter Breast Height or DBH."
2. Multiply that value by 1.5. That result is the radius of the root protection zone in feet. This is also considered the defined working distance.

Once the size of the area is determined, construction fencing materials. Orange tape, silt fence fencing, or the like can be used.

These materials are easy to install but they often get trampled down or removed when it is inconvenient to go around the tree save area. In some cases more permanent materials, such as chain link fencing, may be required. Whatever fencing material is used, it must be maintained throughout the construction process.

Tree Protection: Zone Fencing:

Tree protection zone fencing may be one of the following:

1. For areas of large remnant forest to be protected use 4 foot high orange plastic fabric having staples in three locations to anchor every 2oft radius, five stakes to five or ganzo. Refer to not to be used for stakes. Figure 6-35.1.
2. For single family homes use a basket wood fencing as shown on detail. It may have wood or chain attached to it.
3. For all other developments use 4 foot high chain link fencing attached to galvanized metal post as shown on detail. Figure 6-35.2.

For more information about standards for arborist tree protection, refer to guidelines by the American National Standards (ANSI) or the International Society of Arboriculture.

GSWCC 2016 Edition

TREE PROTECTION

"SNOW" FENCE

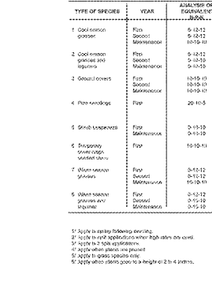

SECTION

1. USE TEMPORARY LOG, SILT FENCE OR 2" X 4"-6" X 6" X 8'-0" T&G STAKES ALONG DRIP LINE EVERY 10' HORIZONTALLY AND DIAGONALLY WITH SAND AND LIGHTLY COMPACTED. STAKES AT INTERVALS SUFFICIENT TO SUPPORT ALL FENCING ALL FENCING ALONG DRIP LINE OR SHOWN BY ENTANGLE CEST STAKES TO GREATER DEPTH OR DISTANCE AS NEEDED TO BE USED FOR STAKES.
2. MAINTAIN HEALTH BY REMOVING AND/OR CONTROLLING ALL DISEASED AND INSECT INFESTED TREES AND SHRUBS. ALL TREES TO BE SAVED SHALL BE FERTILIZED AND WATERED AS NEEDED.
3. DO NOT STORE MATERIALS, EQUIPMENT, OR CONSTRUCT BUILDINGS WITHIN THE DRIP LINE AREA.
4. TREES, SIGNS, OR ORANGE SAFE "SNOW FENCE" MAY BE USED.

Figure 6-35.2

Surface Roughening Su

DEFINITION

Providing a rough soil surface with horizontal depressions created by operating tillage or other suitable implement on the contour, by leaving slopes in a roughened condition by not fine-grading them.

PURPOSE

The purposes of surface roughening are to aid in establishment of vegetative cover with seed, to reduce runoff velocity, to increase infiltration, reduce erosion, and provide for some sediment trapping.

CONDITIONS

All slopes steeper than 3:1 should receive surface roughening. Slopes flatter than 3:1 may require roughening, or loosening, if they have been compacted by construction traffic or other factors and no longer have adequate tilth for germination and plant growth.

Roughening may not be required on rock cuts, but may be necessary in certain soil formations.

DESIGN CRITERIA

Graded areas are usually smooth, bare, and are a ready prescription for "finished grading" and left over the winter. Such areas are particularly subject to accelerated erosion and are the potential for erosion. Rough

GSWCC 2016 Edition

slope surfaces with uneven soil and loose soil in place may appear unstable or undefined at first, but encourage water infiltration, speed up the establishment of vegetation, and decrease runoff velocity. Rough, loose soil is also good for trapping seed, fertilizer and some particle movement. Rolling or the loose-grading machine is recommended for this purpose.

1. Stair-stepping - Stair-step grading may be used on moderately steep cut slopes that have a soft rock, such as sandstone or limestone, that will remain in benches. Ripping may be necessary to achieve adequate loosening.
2. Slope roughening - Slope roughening is considered adequate for most cut slopes that are not in rock. Slope roughening consists of tracking with a crawler tractor operated across the slope as nearly on the contour as practical. Each pass of the tracks should be overlapped with the previous pass to assure adequate roughening. Tracking should be done only enough to leave horizontal depressions in the soil that will trap seed, fertilizer, and mulch. Excessive tracking should be avoided.
3. Scarifying - Scarifying may be necessary on hard, rocky cut slopes where tracking will not be effective. Scarifying may be done with any adequate implement, such as a ripper-tooth attachment, farm harrow, or other suitable implement. Scarifying should produce shallow depressions that will trap seed, fertilizer, and mulch. Implements that cause unduly large furrows, such as bulldozer operations, should not be used.
4. Grooving - Grooving is done by using any suitable implement on the contour in which a series of ridges and depressions are created. Grooves may be made with any appropriate implement that will not cause undue compaction of the soil beyond the desired depth for good seed germination and growth. Implements commonly used for grooving include discs, spring-tooth harrows, and other equipment with similar lateral soil movement. Tracked machinery should not be used for grooving because it compacts the soil excessively.

FILL SLOPE PREPARATION

Fill slopes will require a steeper than 3:1 should not be mowed. They should be stair-step graded or grooved (see Figure 6-36.1).

Stair-step grading may be used on soil or rock slopes. Benches should be wide enough to accommodate equipment used for maintenance. Individual benches should not exceed 8 feet in height.

Fill slopes with a gradient steeper than 2:1 should not be mowed. They should be stair-step graded or grooved (see Figure 6-36.1).

Stair-step grading may be used on soil or rock slopes. Benches should be wide enough to accommodate equipment used for maintenance. Individual benches should not exceed 8 feet in height.

Grooving may be done with any appropriate implement that will not cause undue compaction of the soil beyond the desired depth for good seed germination and growth. Implements commonly used for grooving include discs, spring-tooth harrows, and other equipment with similar lateral soil movement. Tracked machinery should not be used for grooving because it compacts the soil excessively.

Wildlife Plantings

Conservation duty available plants beneficial to wildlife, including the following:

Bald Cypress Trees

Beech, Black Cherry, Blackgum, Chestnut, Crabapple, Hackberry, Hickory, Honey Locust, Native Oak, Persimmon, Sawtooth Oak and Sweetgum.

All trees that produce nuts or fruits are favored by many game species. Nursery provides nuts used mostly by squirrels and bear.

Shrubs and Small Trees

Blueberry, Bicolor Lespedeza, Crabapple, Dogwood, Hawthorn or Native Blackberry, American Elderberry, Native Holly, Red Cedar, Red Mulberry, Sumac, Wax Myrtle, Wild Plum and Elderberry.

Plant in patches without tall trees to develop viable, shrub communities. All creatures make good use of these areas for escape, for nesting and for shelter.

Herbaceous Shrubs and Temporary Cover

Lespedeza, Sericea Lespedeza, Sweet Lespedeza millseeds, Partridge Pea, Annual Lespedeza, Dallisgrass (for grasslands), Browntop Millet (for temporary covers, and Native grasses.

Provides herbaceous cover in openings for a game bird conservation habitat. Appropriate legumes such as vetches, clovers, and lespedezas may be mixed with grass, but they may do not allow a few years.

CONSTRUCTION SPECIFICATIONS

Grading and Shaping

Grading and shaping may not be required where hydraulic seeding equipment is used. This limit fertilizer shall be mixed with seed, inoculant (if needed), and wood cellulose to wood pulp fiber mulch and applied in a slurry. The proportions of seed in the slurry mixture for the various species to be planted should be adjusted to compensate for differences in their germination percentages. Hydraulic seeding equipment must agitate the slurry thoroughly enough to produce a homogeneous mixture in which no seed settles out. The slurry must be uniformly applied over the area to be seeded. Apply within one hour after the mixture is made.

When conventional seeding is to be done, lime and fertilizer shall be applied according to the following rules:

1. Apply lime and preparation so that it will be mixed with the soil during seedbed preparation.
2. Mix with the soil used to fill the holes, double rills in furrows.
3. Broadcast after steep surfaces are roughened, before seeding.
4. Fertilizer shall not be placed at less depth or be mixed with seed. Place in separate rows, four inches below seeding.

Seed Selection

Refer to Table 6-4.1, 6-6.2, 6-6.3 and 6-6.4 for approved species. Species not listed shall be approved by the State Resource Conservationist of the Natural Resources Conservation Service before they are used.

Plants shall be selected on the basis of species characteristics, site and soil conditions, planned use and maintenance of the area, time of year of planting, method of planting, and the needs and desires of the land user.

Some perennial species are rarely established and can be planted alone. Examples of these are Common Bermuda, Tall Fescue, and Weeping Lovegrass.

Other perennials, such as Kobe Sericea and Sericea Lespedeza, are slow to become established and should be planted with another perennial species. The additional species will protect and cover and ensure soil protection until the target perennial species become established. For example, Common seeding combinations are 1) Weeping Lovegrass with Sericea Lespedeza (inoculated) and 2) Tall Fescue with Sericea Lespedeza (inoculated).

Plant selection may also include annual cover crops. Annual cover crops are simple annual species only when the perennial species are not planted during their optimum planting period, as a common practice. Annual cover crops are not a substitute for permanent vegetation and should not be considered as adequate stabilization. Permanent vegetation shall consist of perennial species, shrubs, perennial vines, or a crop of perennial species appropriate for the season, both within the growing season a 70% coverage density must be established. Final application applies to each phase of construction. For these construction projects, seeding may be required over winter and spring months. Annual species may be used for winter cover. Refer to Table 6-4.1 for recommendations.

Mulching

Mulching applies to all seeded areas, to protect the soil from the effects of rainfall, provide conditions favorable to germination and vegetative establishment. Mulch without seeding may be considered for short term protection. Refer to **Du1 - Disturbed Area Stabilization (With Mulching Only).**

Irrigation

Seeding done at drought, water shall be applied at a rate sufficient to prevent puddling and erosion. The soil shall be thoroughly wetted to a depth that will assure germination. Frequent light applications should be made when needed.

Seeding

Select a grass or grass-legume mixture suitable for the area and appropriate for the season. Seed shall be applied uniformly by hand, cyclone seeder, cultipacker seeder, drill, or hydraulic seeder (slurry including seed and fertilizer). Drill or cultipacker seeding should normally place seed one quarter to one-half inch deep. Appropriate depth of planting is between the two extremes. Seed should be "clean" tightly packed and soil not treated by dust. See Table 6-4.1.

Mulching

Topdressing vegetation, in most cases, be considered without the use of mulch, provided there is little to no erosion potential. However, the use of mulch may also help conserve moisture, reduce germination and vegetative establishment. Mulch without seeding may be considered for short term protection. Refer to **Du1 - Disturbed Area Stabilization (With Mulching Only).**

Irrigation

Seeding done at drought, water shall be applied at a rate sufficient to prevent puddling and erosion. The soil shall be thoroughly wetted to a depth that will assure germination. Frequent light applications should be made when needed.

Topdressing

Topdressing will be applied on all temporary and permanent grassed species planted alone or in mixtures with other species. Recommended rates of application are listed in Table 6-5.1.

Second Year and Maintenance Fertilization

Annually test fertilizer tons and maintenance fertilizer rates are listed in Table 6-5.1.

Lime Maintenance Applications

Apply lime on all agricultural time every 4 to 6 years, as indicated by soil tests. Soil tests can be conducted to determine exact application requirements, if desired.

Use and Management

Mow Sericea Lespedeza only after frost to ensure that the seeds are mature. Mow between November and March.

Bermudagrass, Bahiagrass and Tall Fescue may be mowed as desired. Maintain at least 6 inches of top growth under any use and management. Maximum use of top growth is permitted after establishment.

Excessive traffic until the plants are well established. Exclusion of this could reduce season, mowing should not take place between May and September.

GSWCC 2016 Edition

Disturbed Area Stabilization (With Permanent Seeding) Ds2

DEFINITION

Permanent vegetation shall consist exclusively of perennial vegetation above sufficient density to adequately stabilize the soil from erosion.

PURPOSE

To establish the soil surface from erosion

To reduce damage from sediment and runoff to down-stream areas

To improve wildlife habitat and visual resources

To improve aesthetics

REQUIREMENT FOR REGULATORY COMPLIANCE

This practice shall be applied immediately to rough graded areas that will remain undisturbed for longer than six months. Graded areas that will be redisturbed within six months may be stabilized as specified in **Du1 - Disturbed Area Stabilization (With Mulching Only).**

CONSTRUCTION SPECIFICATIONS

Grading and Shaping

Grading and shaping may not be required where hydraulic seeding equipment is used. This limit fertilizer shall be mixed with seed, inoculant (if needed), and wood cellulose to wood pulp fiber mulch and applied in a slurry. The proportions of seed in the slurry mixture for the various species to be planted should be adjusted to compensate for differences in their germination percentages. Hydraulic seeding equipment must agitate the slurry thoroughly enough to produce a homogeneous mixture in which no seed settles out. The slurry must be uniformly applied over the area to be seeded. Apply within one hour after the mixture is made.

When conventional seeding is to be done, lime and fertilizer shall be applied according to the following rules:

1. Apply lime and preparation so that it will be mixed with the soil during seedbed preparation.
2. Mix with the soil used to fill the holes, double rills in furrows.
3. Broadcast after steep surfaces are roughened, before seeding.
4. Fertilizer shall not be placed at less depth or be mixed with seed. Place in separate rows, four inches below seeding.

Seed Selection

Refer to Table 6-4.1, 6-6.2, 6-6.3 and 6-6.4 for approved species. Species not listed shall be approved by the State Resource Conservationist of the Natural Resources Conservation Service before they are used.

Plants shall be selected on the basis of species characteristics, site and soil conditions, planned use and maintenance of the area, time of year of planting, method of planting, and the needs and desires of the land user.

Some perennial species are rarely established and can be planted alone. Examples of these are Common Bermuda, Tall Fescue, and Weeping Lovegrass.

Other perennials, such as Kobe Sericea and Sericea Lespedeza, are slow to become established and should be planted with another perennial species. The additional species will protect and cover and ensure soil protection until the target perennial species become established. For example, Common seeding combinations are 1) Weeping Lovegrass with Sericea Lespedeza (inoculated) and 2) Tall Fescue with Sericea Lespedeza (inoculated).

Plant selection may also include annual cover crops. Annual cover crops are simple annual species only when the perennial species are not planted during their optimum planting period, as a common practice. Annual cover crops are not a substitute for permanent vegetation and should not be considered as adequate stabilization. Permanent vegetation shall consist exclusively of perennial species, shrubs, perennial vines, or a crop of perennial species appropriate for the season, both within the growing season a 70% coverage density must be established. Final application applies to each phase of construction. For these construction projects, seeding may be required over winter and spring months. Annual species may be used for winter cover. Refer to Table 6-4.1 for recommendations.

Wildlife Plantings

Conservation duty available plants beneficial to wildlife, including the following:

Bald Cypress Trees

Beech, Black Cherry, Blackgum, Chestnut, Crabapple, Hackberry, Hickory, Honey Locust, Native Oak, Persimmon, Sawtooth Oak and Sweetgum.

All trees that produce nuts or fruits are favored by many game species. Nursery provides nuts used mostly by squirrels and bear.

Shrubs and Small Trees

Blueberry, Bicolor Lespedeza, Crabapple, Dogwood, Hawthorn or Native Blackberry, American Elderberry, Native Holly, Red Cedar, Red Mulberry, Sumac, Wax Myrtle, Wild Plum and Elderberry.

Plant in patches without tall trees to develop viable, shrub communities. All creatures make good use of these areas for escape, for nesting and for shelter.

Herbaceous Shrubs and Temporary Cover

Lespedeza, Sericea Lespedeza, Sweet Lespedeza millseeds, Partridge Pea, Annual Lespedeza, Dallisgrass (for grasslands), Browntop Millet (for temporary covers, and Native grasses.

Provides herbaceous cover in openings for a game bird conservation habitat. Appropriate legumes such as vetches, clovers, and lespedezas may be mixed with grass, but they may do not allow a few years.