SWANSTONE COUNTERTOP REFURBISHMENT REQUIREMENTS

1. REMOVE ANY ITEMS NOT MECHANICALLY FASTENED OR ATTACHED TO THE COUNTERTOPS.
2. REMOVE ANY STICKERS OR LABELS APPLIED TO THE COUNTERTOPS.
3. CLEAN COUNTERTOP WITH A MILD SOLUTION (50/50) OF CHLORINE BLEACH AND WATER. REMOVE DIRT FROM SCRATCHES WHEN CLEANING. WIPE DOWN COUNTER WITH CLEAN FRESH WATER AND ALLOW COUNTERTOPS TO DRY THOROUGHLY.
4. MASK OFF AND COVER SENSORMATIC PADS, REGISTERS, DISPLAYS, ETC. THAT ARE PERMANENTLY ATTACHED TO THE COUNTERTOPS TO PROTECT FROM DUST.
5. MASK OFF CABINETS FROM BOTTOM EDGE OF COUNTERTOP ON OPEN SIDE OF CABIENTS TO FLOOR.
6. BEGIN SANDING AREAS WITH DEEP SCRATCHES/GOUGES WITH A 120 GRIT SANDPAPER DESIGNED FOR WET SANDING TO CONTROL DUST TO REMOVE DEEP SCRATCHES AND GOUGES. USE A PALM GRIP RANDOM ORBITAL SANDER WITH DUST COLLECTOR AND 3M WET/DRY SANDPAPER OR EQUIVALENT.
7. PROVIDE A CONTINUOUS FINE MIST OF WATER TO CONTROL DUST.
8. AS SCRATCHES BECOME SHALLOWER USE A FINER GRIT WET/DRY SAND PAPER TO SMOOTH THE SURFACE. 220-400 GRIT.
9. SAND ALL AREAS WITH MINOR BLEMISHS AND STAINS WITH 220-400 GRIT WET/DRY SANDPAPER.
10. ONCE SCRATCHES ARE NO LONGER VISIBLE, RUB COUNTER WITH A SCOURING PAD TO FURTHER SMOOTH THE COUNTERTOP.
11. CLEAN COUNTER WITH ALL PURPOSE CLEANER USING A DAMP SPONGE. WIPE DRY WITH A MICROFIBER CLOTH.

SHEET NOTES

1. REFER TO SHEET A8 FOR SCHEDULE FINISH KEY AND GENERAL FINISH NOTES.
2. USE CONTINUOUS SEALANT WHERE COUNTER TOP AND CASEWORK MEET WALL OR OTHER OBSTACLES.
3. USE CONTINUOUS SEALANT AT TOP, BOTTOM AND SIDES WHERE BASE IS PRESENT ON COUNTERS AND CASEWORK.
4. WHERE NEW LAMINATE IS INDICATED FOR EXISTING CASEWORK, REMOVE EXISTING LAMINATE AND/OR FINISHES TO BASE SUBSTRATE PRIOR TO INSTALLATION OF NEW. INSTALLATION OF NEW LAMINATE OVER EXISTING IS NOT ACCEPTABLE. NO EXCEPTIONS.
5. INSTALL ALUMINUM CORNER GUARDS AT ALL EXPOSED MILLWORK CORNERS. REF SPECIFICATIONS.

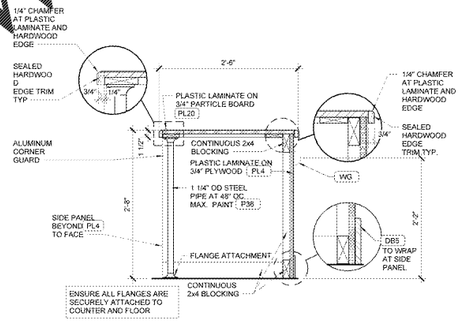

8 COUNTER SECTION
1" = 1'-0"

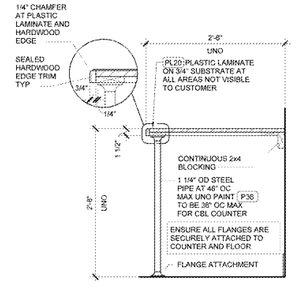

7 COUNTER SECTION
1" = 1'-0"

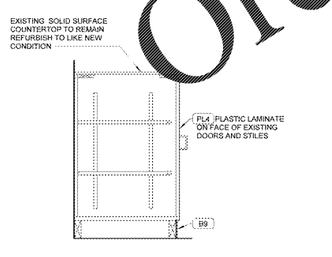

6 BASE CABINET SECTION (AT ACC)
1" = 1'-0"

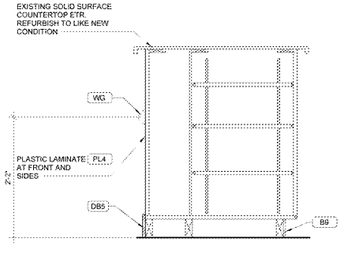

5 BASE CABINET SECTION (AT ACC)
1" = 1'-0"

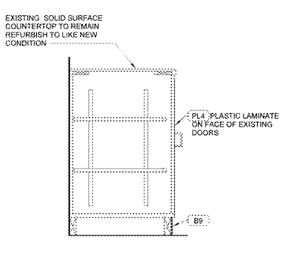

4 BASE CABINET SECTION
1" = 1'-0"

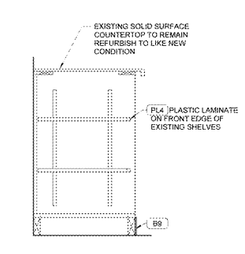

3 BASE CABINET SECTION
1" = 1'-0"

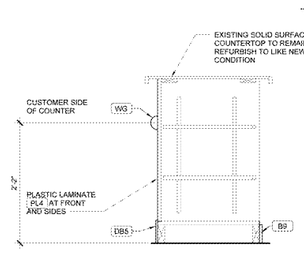

2 BASE CABINET SECTION
1" = 1'-0"

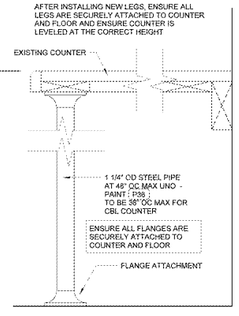

1 COUNTER LEG
3" = 1'-0"

Order Plans @ www.LDILine.com

CYNTERGY
817 SOUTH CINCINNATI
SECOND FLOOR
TULSA, OK 74119
918.587.4000
www.cyntergy.com

STIPULATION FOR REUSE
STIPULATION FOR REUSE

THIS DRAWING WAS PREPARED FOR USE ON A SPECIFIC PROJECT AND IS NOT TO BE USED FOR ANY OTHER PROJECT OR EXTENSION OF THIS PROJECT WITHOUT THE EXPRESS WRITTEN PERMISSION AND ADAPTATION OF THE CONSULTANT. ALL COPYRIGHTS AND OTHER RIGHTS RESERVED.

CONSULTANTS

Walmart
FAYETTEVILLE, NC
STORE NO.: 1261-246 | 195 SC
JOB NUMBER: | USRM-067205 | PROTO:

ISSUE BLOCK

CHECKED BY:	JT/SH
DRAWN BY:	RR
PROTO CYCLE:	02/28/2020
DOC DATE:	04/15/2020

DOCUMENTS WITHOUT SIGNATURE AND REQUIRED SEAL OF AOR/EOR ARE NOT FOR CONSTRUCTION

JAMES EDWARD TURNER
ARCHITECT OF RECORD

CASEWORK

SHEET:
A9

2/17/2020 11:03:31 AM
C:\Users\rrivera\Documents\Revit Central Files\Walmart\Walmart_SC_STD_Arch_v18_rrivera.rvt