


Order Plans @

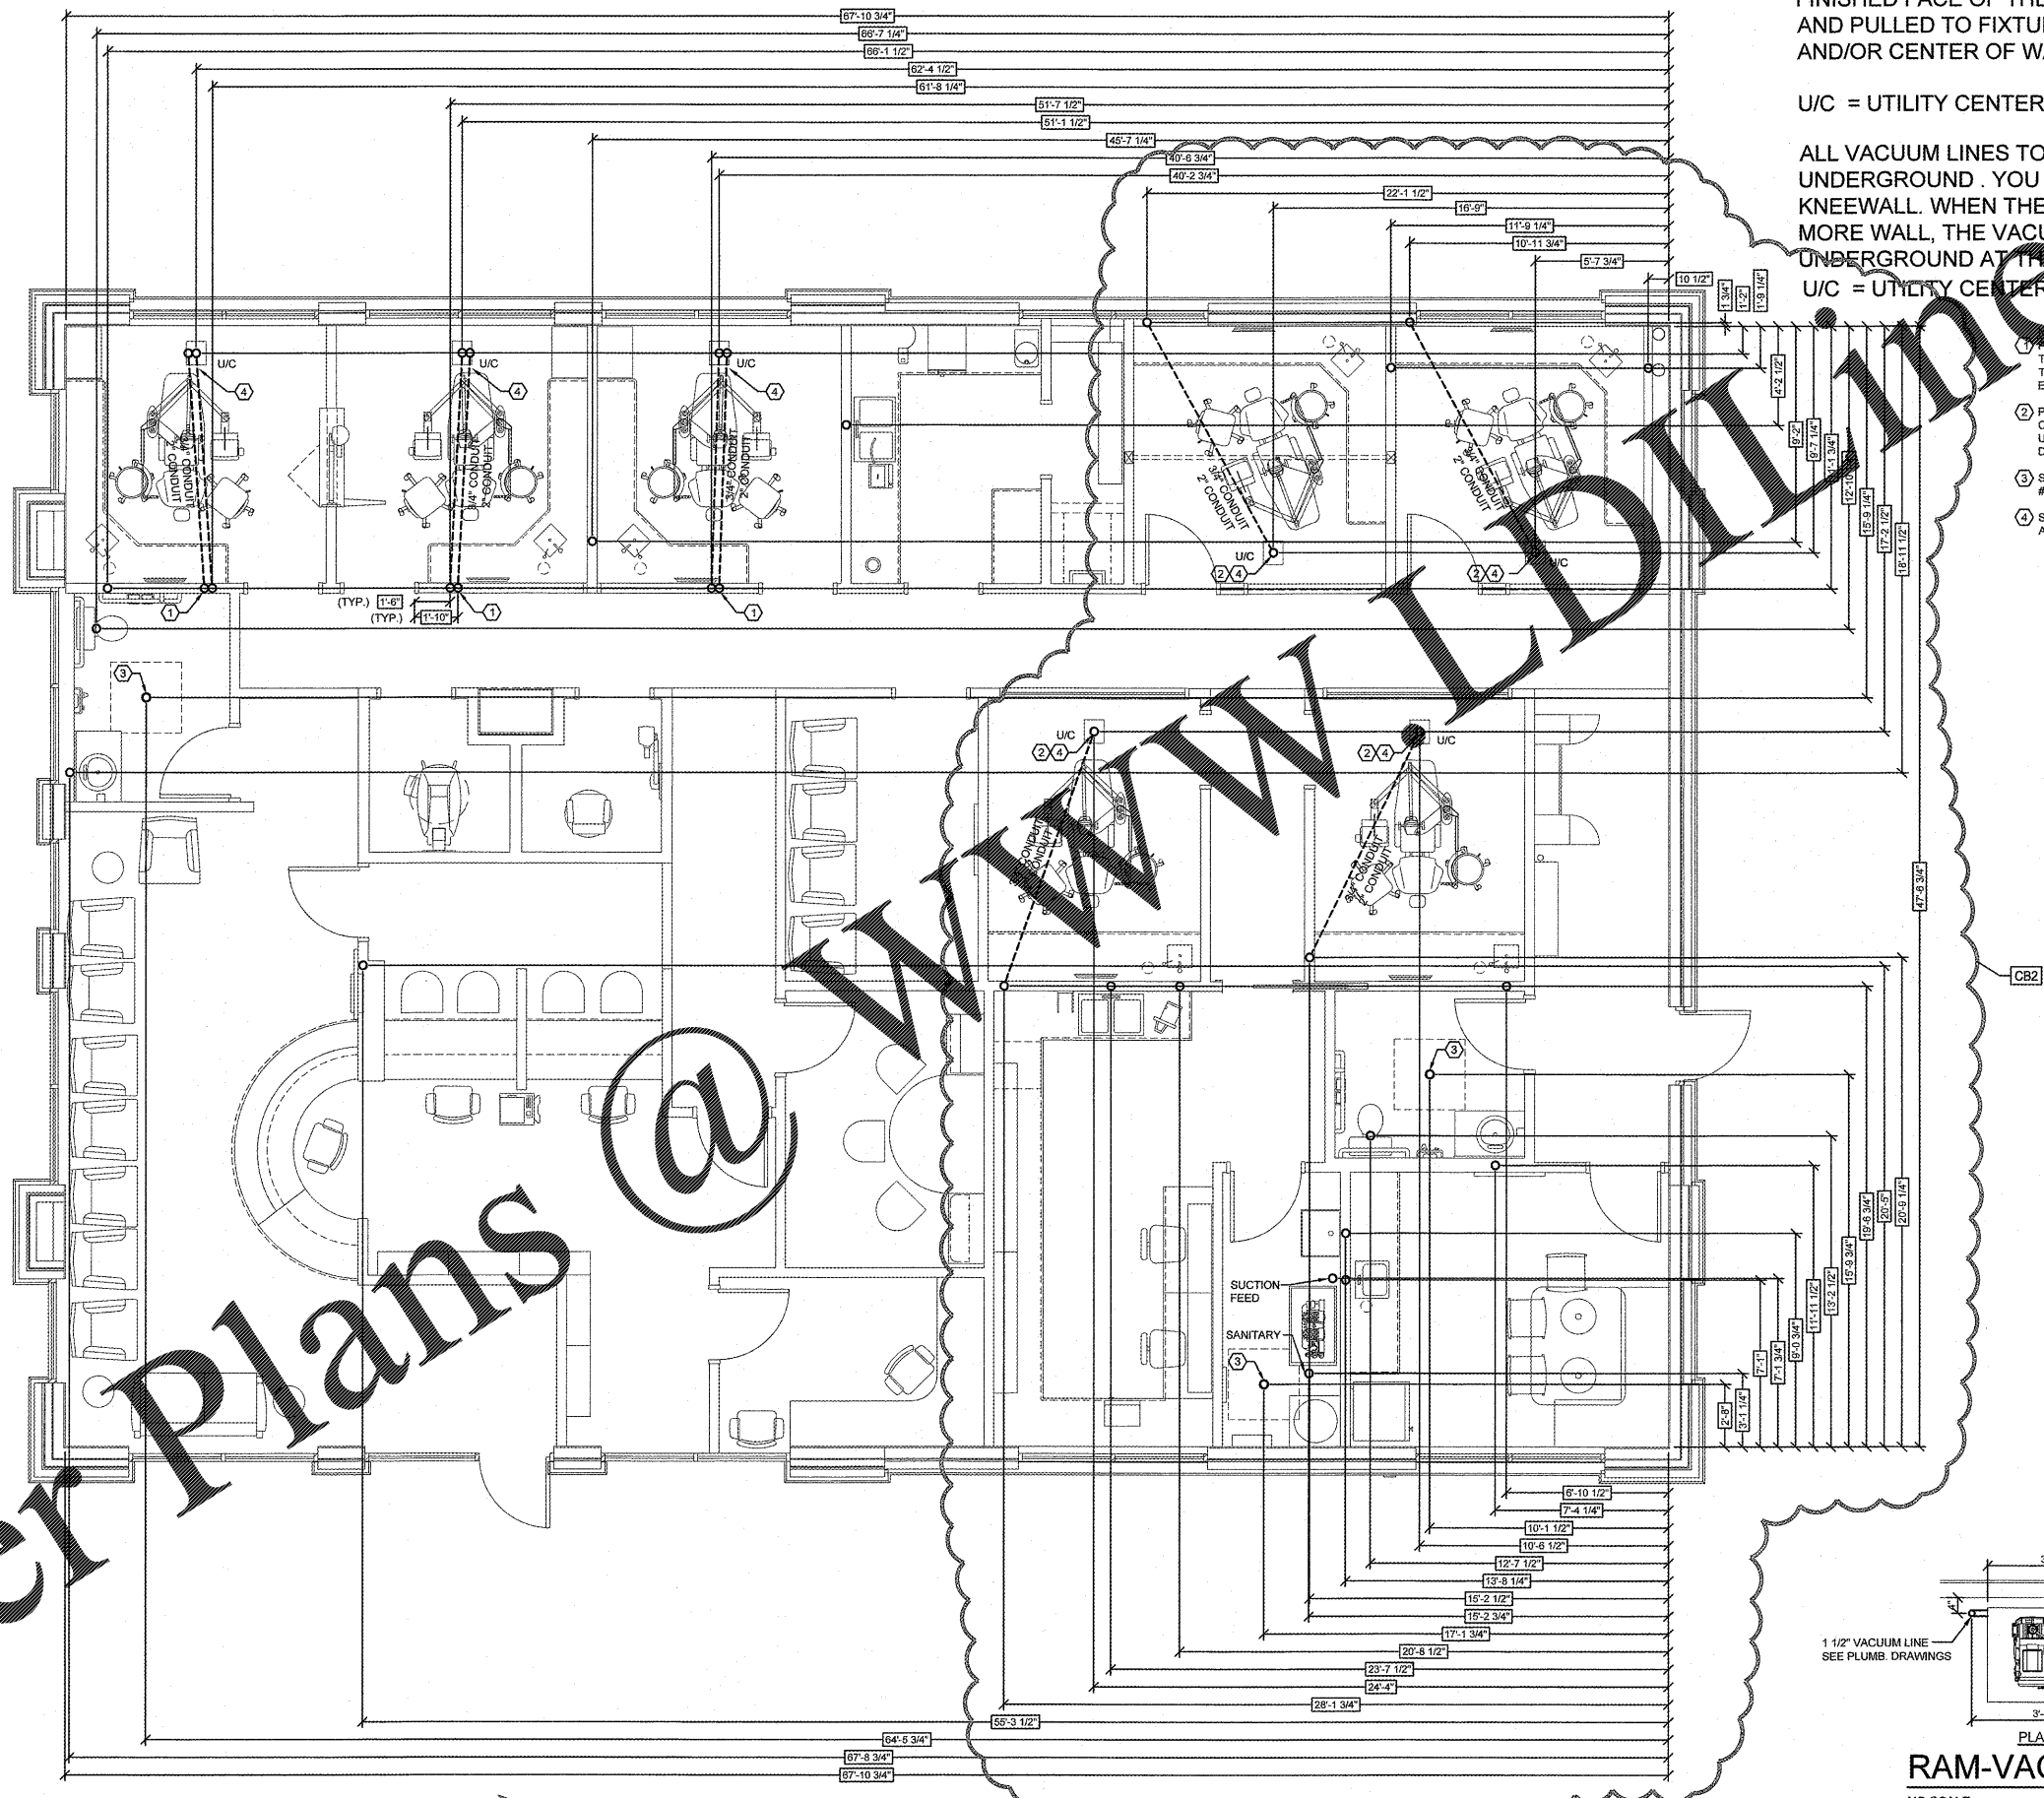


ALL DIMENSIONS ARE TAKEN OFF THE FINISHED FACE OF THE PERIMETER WALL, AND PULLED TO FIXTURE LOCATION AND/OR CENTER OF WALL PARTITIONS.

U/C = UTILITY CENTER

ALL VACUUM LINES TO BE RAN UNDERGROUND. YOU CAN USE ANY WALL OR KNEEWALL. WHEN THERE IS NO MORE WALL, THE VACUUM MUST DUMP UNDERGROUND AT THAT POINT.


U/C = UTILITY CENTER

- 1 POWER TO BE BROUGHT UNDER COUNTER THROUGH 3/4" POWER CONDUIT. 2" DATA CONDUIT TO BE RUN UNDERGROUND. (REFER TO ELECTRICAL DRAWINGS & DETAIL 3.E0.2)
- 2 POWER TO BE BROUGHT THROUGH 3/4" POWER CONDUIT. 2" DATA CONDUIT TO BE RUN UNDERGROUND. (REFER TO ELECTRICAL DRAWINGS)
- 3 SEE "SLAB LEAVE OUT AT FLOOR DRAIN DETAIL" #D-1AMD FOR ADDITIONAL REQUIREMENTS.
- 4 SEE "FLOOR BOX DETAIL" #D-3AMD FOR ADDITIONAL REQUIREMENTS.

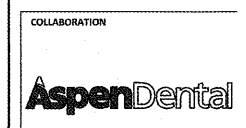


PROJECT INFORMATION
PROJECT NUMBER 1712680

TENANT BUILD-OUT FOR:
ASPEN DENTAL
3070 WILLIAM STREET • CAPE GIRARDEAU, MO 63703

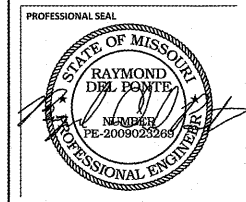

SHEET DATES	
ISSUE DATE	JUNE 1, 2017
REVISIONS	
AD2	JUNE 22, 2017
ENTIRE SHEET	
CB1	DEC. 15, 2017
CB2	DEC. 19, 2017

REVIEWED FOR
CODE COMPLIANCE
JAN 05 2018
RETAIN AT JOB SITE
Approved By: *Raymond Del Ponte*
CITY OF CAPE GIRARDEAU, Inspection Services

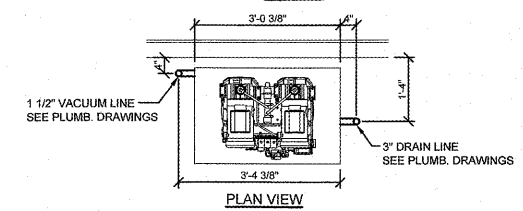

RAM-VAC DETAIL
NO SCALE

UNDERGROUND UTILITY RISER PLAN
SCALE: 1/4" = 1'-0"

SHEET INFORMATION
UNDERGROUND UTILITY RISER PLAN AND DETAIL
SHEET NUMBER

U1.1