

Order Plans @ www.LDILine.com

GENERAL NOTES

1. RE-CALIBRATE SENSORS AND CONTROLS ASSOCIATED WITH ALL TERMINAL REHEAT UNITS WHERE AIR FLOW BALANCE IS INDICATED. REPORT DEFECTIVE CONTROLLERS OR SENSORS TO ENGINEER. EXISTING CONTROLLERS AND SENSORS ARE BY JOHNSON CONTROLS.
2. GRAPHICS SHALL BE UPDATED TO REFLECT ANY CHANGES TO ROOM ID OR CONFIGURATION.


SHEET KEYED NOTES

- 1 NO PIPING WORK, THIS ROOM.
- 2 RELOCATE THERMOSTAT TO LOCATION INDICATED.
- 3 OXYGEN DEPLETION MONITOR SHALL BE LOCATED IN ROOM WITH BULK NITROGEN STORAGE OR WHERE NITROGEN MAY BE DISPENSED. MONITOR SHALL PROVIDE A LOCAL AUDIO-VISUAL ALARM AND ALSO ALARM CAMPUS PUBLIC SAFETY OFFICE AND BAS IF OXYGEN LEVELS DROP BELOW 18%. MOUNT ADJACENT TO AND AT SAME ELEVATION AS THERMOSTAT.
- 4 FAN COIL UNIT THERMOSTAT SETPOINT SHALL BE 2'F HIGHER THAN TERMONAL BOX SETPOINT.
- 5 INTERCEPT EXISTING PROCESS CHILLED WATER PIPING VIA WET TAP TO AVOID THE NEED TO DRAIN THE SYSTEM.
- 6 EXTEND MINIMUM 1" CONDENSATE DRAIN TO HUB DRAIN.

PARTITION AND WALL LEGEND

- 1-HOUR FIRE BARRIER
- 2-HOUR FIRE BARRIER

1 SEVENTH FLOOR PLAN - MECHANICAL PIPING
M117 1/8" = 1'-0"

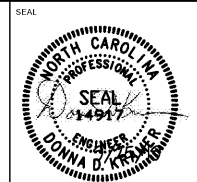

ISSUE DATE: 09/25/2019
JOB NO: 10761-00
DWG. NO:

M117

SEVENTH FLOOR PLAN - MECHANICAL PIPING

UNC SCHOOL OF MEDICINE
NEUROSCIENCES RESEARCH BUILDING
7th & 8th FLOORS FOR DERMATOLOGY
LOCATION:
115 Mason Farm Road, Campus Box 7250
Chapel Hill, North Carolina 27598-7250

Kramer Engineering Services, plc
5517 Cascade Dr.
Chapel Hill, NC 27514
TEL: (919) 933-3350
email: Donna@KESplc.com
Firm License: P-1099



REVISION

LORD AECK SARGENT
A KATERRA COMPANY
© 2018 Lord Aeck Sargent. All rights reserved. This document is the property of Lord Aeck Sargent and is to be returned upon demand. The information contained herein may not be used or divulged without the written permission of Lord Aeck Sargent.

SCALE (INCHES)
1/8" = 1'-0"
0 1 2 3 4 5 6 7 8 9 10 FEET

BID SET