


1 ENLARGED POWER PLAN
E-HUB2 1/2" = 1'-0"

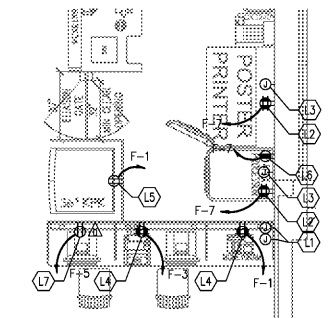

2 ENLARGED POWER PLAN
E-HUB2 1/4" = 1'-0"

- KEYED NOTES - PHOTOLAB**
- (L1) PROVIDE (2) J-BOXES, (1) FOR POWER AND (1) FOR LOW VOLTAGE WIRING. MOUNT BELOW COUNTER TOP.
 - (L2) PROVIDE ONE (1)-QUAD RECEPTACLE FLUSH MOUNTED 24" AFF.
 - (L3) PROVIDE 1 JUNCTION BOX AT 14" AFF. WITH 1" CONDUIT WITH PULLWIRE AT 24" ABOVE CEILING.
 - (L4) PROVIDE ONE (1)-QUAD RECEPTACLES SURFACE MOUNTED BELOW COUNTER TOP.
 - (L5) PROVIDE ONE (1)-DUPEX RECEPTACLE SURFACE MOUNTED AT 14" AFF.
 - (L6) PROVIDE ONE (1)-DUPEX RECEPTACLE FLUSH MOUNTED 24" AFF.
 - (L7) PROVIDE (1) DUPEX RECEPTACLE AND DATA OUTLET MOUNTED BELOW COUNTER FOR MONEYGRAM KIOSK. INSTALL POWER AND DATA IN FLEXIBLE CORRUGATED TUBING BLACK DIAMETER BETWEEN MONEYGRAM KIOSK AND PHOTOLAB COUNTER.

HEALTHHUB GENERAL NOTES

1. PROVIDE HOSPITAL GRADE WIRING, RECEPTACLES AND SWITCHES FOR THE "HEALTHHUB". INSTALL WIRING AND DEVICES IN ACCORDANCE WITH NEC ARTICLE 517.
2. REFER TO LOW VOLTAGE SPEC MANUAL (REDBOOK) FOR ADDITIONAL INFORMATION.
3. ALL HEALTHHUB CIRCUITS SHALL BE ON A DEDICATED CIRCUIT.
4. CONNECT HEALTHHUB LIGHTING TO EMS/TIMER ALONG WITH OTHER RETAIL LIGHTING.
5. INSTALL HOSPITAL GRADE, ISOLATED GROUND RECEPTACLES SIMILAR TO LEVITON #8300-IG TYPICAL FOR RECEPTACLES IN HEALTHHUB. CABLING FOR THESE RECEPTACLES MAY USE RIGID CONDUIT OR TYPE HCF-90 CABLE (MC CABLE IS NOT ACCEPTABLE).
6. CONTRACTOR TO VERIFY EXISTENCE OF VOICE CABINET (WHITE CABINET). IF NO WHITE CABINET EXISTS ALL GRAY JACKS SHOWN IN THIS FIGURE WILL BE REPLACED WITH BLACK JACKS AND CABLES RUN TO THE FULL SIZE CABINET, EITHER 7' OR 8'.

KEYED NOTES - POWER

- (P1) RELOCATE/ PROVIDE WIRING CHASE TO BE MANUFACTURED BY WEIDENBACH-BROWN WITH ALL COMPONENTS IN A COMPLETE AND STATIONARY INSTALLATION FOR CONDUIT TABLE. PROVIDE JUNCTION BOX 6" ABOVE CEILING FOR WIRING CHASE CONNECTION. VERIFY LENGTH OF WIRING CHASE REQUIRED PRIOR TO ORDERING. PROVIDE LOAD CENTER ACCESS PANEL ON TABLE AS NEEDED.
- (P2) PROVIDE FLUSH MOUNTED DUPEX RECEPTACLE FOR LEARNING TABLE. RUN CONDUIT BEHIND DRYWALL ALONG THE LOW WALL. PROVIDE LOAD CENTER ACCESS PANEL ON TABLE AS NEEDED.
- (P3) PROVIDE FLUSH MOUNTED DUPEX RECEPTACLE FOR CHARGING TABLE.
- (P4) EXISTING LEARNING TABLE TO BE RELOCATED TO THIS LOCATION. REINSTALL DEVICES MATCHING EXISTING LOCATION. EXTEND CIRCUIT AS NEEDED TO NEW LOCATION.
- (P5) GC TO PROVIDE SECURITY CAMERA INFORMATION OUTLETS. COORDINATE WITH CVS SECURITY ALARM NAI VENDOR FOR QUANTITY OF OUTLETS AND LOCATIONS.

GC TO COORDINATE WITH CVS VENDOR FOR RELOCATION /REINSTALLATION OF ALL CAMERAS, MOTION DETECTORS, SECURITY EQUIPMENT INCLUDING FIRE ALARM EQUIPMENT.



HEALTH HUB/Rx CONSULTATION
STORE NUMBER: 4176

11 RIVER RIDGE DRIVE, OAKLEY PLAZA
ASHEVILLE, NC 28803
CAP CODE: 90

CS PROJECT NUMBER: 146740

ARCHITECT OF RECORD:




115 S. College St., 2nd Floor, Charlotte, NC 28207
T: 704.875.8300 F: 704.861.8700
www.littleonline.com

This drawing and the design shown are the property of Little Architectural Consulting. The reproduction, copying or other use of this drawing without their written consent is prohibited and any infringement will be subject to legal action.



DEVELOPER:

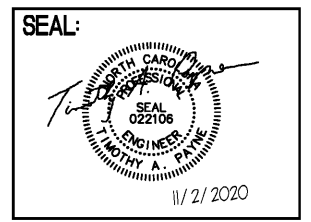

REVISIONS:

DRAWING BY: WC

CVS PROJECT MANAGER: RJ

DATE: 11-02-2020

JOB NUMBER: 121-14217-08

TITLE: HEALTH HUB/PHOTOLAB POWER PLANS

SHEET NUMBER:

E-HUB2

COMMENTS: