
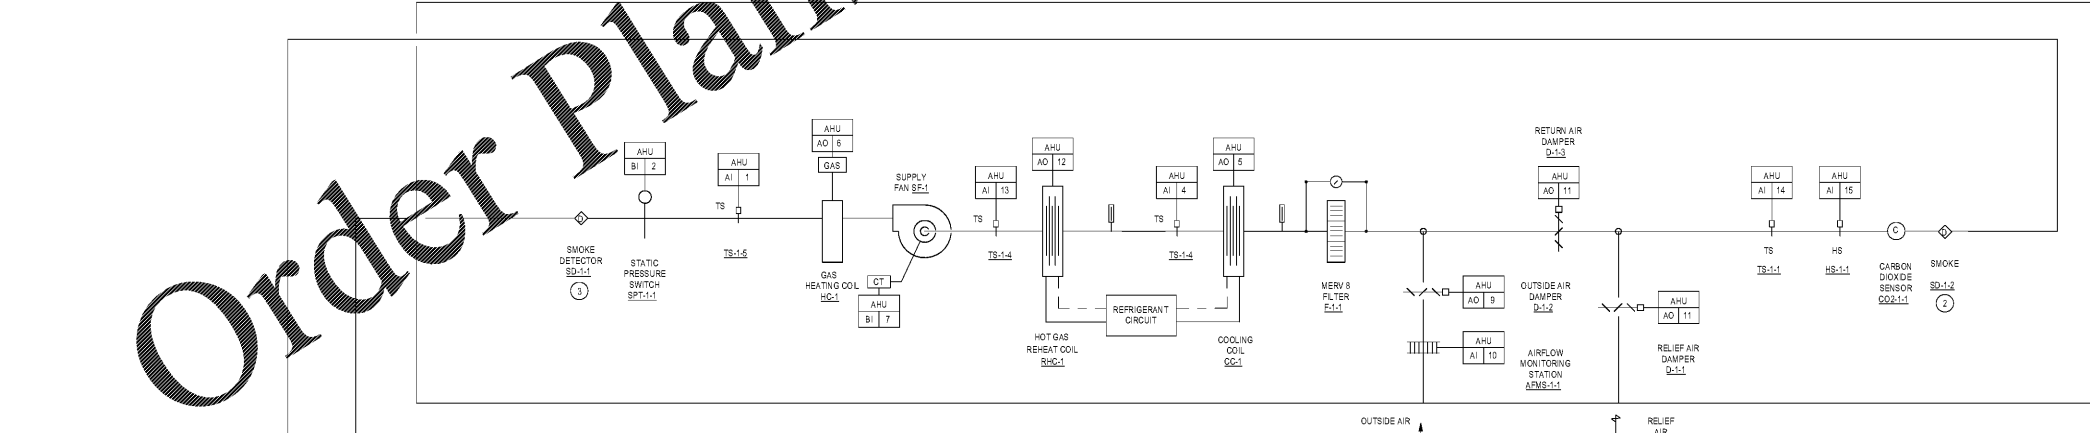


01	100% CD SET	01/31/2020
02		
03		
04		
05		
06		
07		
08		
09		
10		
11		
12		
13		
14		
15		
16		
17		
18		

POINT NO.	SYSTEM APPARATUS OR AREA POINT DESCRIPTION	INPUTS							OUTPUTS							GEN.											
		ANALOG				BINARY			ANALOG				BINARY														
MEASURED	CALC.	TEMPERATURE	RELATIVE HUMIDITY	CARBON DIOXIDE	ENTHALPY	ENTHALPY	ENTHALPY	STATUS (DEF. PRESS.)	SMOKE	FIRE	STATUS (AMPS)	HEAT	STATUS	START/STOP	DAMPEN POSITION	VALVE POSITION	DAMPEN POSITION	COOLING COIL	COOLING COIL	GAS HEAT	COIL TEMP	COIL TEMP	COIL TEMP	COIL TEMP	COIL TEMP	COIL TEMP	
AHU-1																											
1,2,3	SUPPLY AIR	X	X																								
4,5	COOLING COIL CC-1	X																									
6	GAS HEATING COIL																										
7	SUPPLY FAN SF-1						X				X																
8	DAMPER D-1.1																										
9,10	OUTSIDE AIR	X																									
11	DAMPER D-1.2																										
12-13	HOT GAS REHEAT COIL RC-1	X																									
14-15	RETURN AIR	X		X																							
16-18	REMOTE SENSORS	X	X	X																							

DRAWING NOTES:
 1. STATIC PRESSURE SENSOR SHALL BE LOCATED IN THE SUPPLY DUCTWORK AT THE POINT(S) OF MINIMUM STATIC PRESSURE (TYPICALLY 25' DOWNSTREAM) AND THE INITIAL BALANCED SET POINT (DETERMINED THROUGH TEST AND BALANCE).
 2. SMOKE DETECTOR SHALL BE FURNISHED AND WIRED UNDER DIVISION 26 AND INSTALLED BY DIVISION 23.

- SEQUENCE OF CONTROLS
- PART 1 - TEMPERATURE CONTROL SEQUENCES
- SEE SCHEMATICS FOR LOCATIONS OF ALL TEMPERATURE TRANSMITTERS, PANELS, DAMPERS, VALVES, AND EQUIPMENT, WHERE SUCH DEVICES ARE NOT INDICATED, HOWEVER REQUIRED BY THE SEQUENCES, THEY SHALL BE PROVIDED BY THE BUILDING AUTOMATION SYSTEM (BAS) PROVIDER AND LOCATED IN THE FIELD BY THE ENGINEER.
 - A FULL COMMUNICATIONS INTERFACE AND COMPLETE INTEROPERABILITY WITH THE BAS SHALL BE PROVIDED TO PERFORM THE FUNCTIONS HEREIN DESCRIBED OR INDICATED IN THE CONTRACT DOCUMENTS.
 - THE BAS PROVIDER AND THE EQUIPMENT MANUFACTURER SHALL PROVIDE A COMPLETE LIST OF ALL BAIPOINTS AVAILABLE TO BE ACCESSED FROM WITHIN THE MANUFACTURER'S FACTORY CONTROLS AND, SPECIFICALLY, IDENTIFY WHAT POINTS CAN BE READ FROM THE BAS, WHICH POINTS CAN BE WRITTEN TO AND WHICH POINTS CANNOT BE ACCESSED AT ALL.
 - THE BAS SUBMITTAL SEQUENCES AND POINTS LISTS SHALL INDICATE ALL ROUTINES THAT ARE CONTROLLED COMPLETELY BY THE MANUFACTURER'S CONTROLLERS, WHOSE ROUTINES ARE CONTROLLED PARTIALLY BY THE MANUFACTURER'S CONTROLLERS AND BAS AND WHICH ROUTINES ARE CONTROLLED COMPLETELY BY THE BAS.
 - THE BAS PROVIDER AND EQUIPMENT MANUFACTURER, IN COLLABORATION, SHALL PROVIDE COORDINATED SUBMITTALS THAT INDICATE ANYTHING THAT HAS TO BE SET, RESET OR ACCESSED IN A MANUFACTURER'S CONTROLS AT THE POINTS OF EQUIPMENT AS OPPOSED TO BEING ACCESSED AT OR FROM THE BAS USER INTERFACE/CONTROL CONSOLE. THIS COORDINATION AND COLLABORATION SHALL OCCUR AT THE SUBMITTAL PHASE AND WELL BEFORE EQUIPMENT AND CONTROLS ARE DELIVERED TO THE SITE.
 - ALL SETPOINTS SHALL BE FULLY ADJUSTABLE FROM THE BAS.
- PART 2 - MASTER HEATING AND COOLING CONTROL
- THE BAS SHALL COMMAND THE AIR HANDLING UNIT ON BASED ON THE OCCUPIED/UNOCCUPIED SCHEDULE (INITIAL SCHEDULE SHALL BE PROVIDED BY THE OWNER) AND ENABLE THE AHU'S AUTOMATIC CONTROLS TO OPERATE AS INDICATED BELOW
 - BAS SHALL NORMALLY CONTROL THE SYSTEM HEATING AND COOLING MODES AS SELECTED IN ACCORDANCE WITH OUTDOOR AIR TEMPERATURE THROUGH THE BUILDING GLOBAL OUTDOOR AIR SENSOR, ON A RISE IN OUTDOOR AIR TEMPERATURE TO 50°F AND ABOVE, SYSTEMS SHALL OPERATE IN THE COOLING MODE. ON A FALL IN OUTDOOR AIR TEMPERATURE BELOW 50°F SYSTEMS SHALL OPERATE IN THE HEATING MODE.
 - CONTROL POINT ADJUSTMENT FOR "HEATING" AND "COOLING" CHANGE OVER TEMPERATURE SHALL BE BY THE BAS.
 - WHERE USED TO CONTROL BOTH COMFORT HEATING AND COOLING, ZONE THERMOSTATIC CONTROLS SHALL BE CAPABLE OF PROVIDING A TEMPERATURE RANGE OR DEAD BAND OF AT LEAST 1°F WITHIN WHICH THE SUPPLY OF HEATING AND COOLING ENERGY TO THE ZONE IS SHUT OFF OR REDUCED TO A MINIMUM.
- PART 3 - AIR HANDLING UNIT CONTROL
- SYSTEM CONTROL
- SUPPLY FAN SHALL BE MANUALLY INDEXED TO THE AUTOMATIC MODE AT THE BYPASS.
 - THE AIR HANDLING UNIT SHALL BE ENERGIZED VIA REMOTE SIGNAL FROM THE BAS. THE BAS SHALL DETERMINE AND OPERATE THE UNIT ON AN OPTIMAL OCCUPIED AND UNOCCUPIED SCHEDULE WITH A 365 DAY/24 HOUR GRAPHIC INTERFACE SCHEDULE PROGRAM.
 - WHEN THE UNIT IS DEENERGIZED THROUGH THE BAS, ALL CONTROLS SHALL RETURN TO THEIR NORMAL POSITION READY FOR RESTARTING. THE SUPPLY FAN SHALL DEENERGIZE AND, AFTER AN ADJUSTABLE INTERVAL, OUTSIDE AIR DAMPER D-1.1, SHALL CLOSE. END SWITCH ON DAMPER SHALL PROVIDE PROOF OF CLOSURE. THE REFRIGERANT CIRCUIT SHALL DEENERGIZE.
 - WHEN THE AIR HANDLING UNIT IS ENERGIZED THROUGH THE BAS, THE RELIEF D-1.1 AND OUTDOOR AIR D-1.2 DAMPERS SHALL OPEN TO THEIR MINIMUM BALANCED POSITIONS. THE SUPPLY FAN SHALL BE SOFT STARTED TO MINIMUM SPEED.
 - THE SUPPLY FAN SE-1 SHALL BE SOFT STARTED THROUGH THE BAS. UPON FAILURE OF SUPPLY FAN D-1.2 TO OPEN, THE AIR HANDLING UNIT SHALL BE DEENERGIZED AND AN ALARM SHALL BE ANNUNCIATED AT THE BAS.
 - THE SUPPLY FAN SE-1 SPEED SHALL BE CONSTANT SPEED.
 - A FAILURE OF THE SUPPLY FAN AS SENSED BY THE CURRENT TRANSUCER SHALL BE ALARMED TO THE BAS. UPON SENSING FAILURE, THE BAS SHALL INDICATE ALARM, DISABLE THE FAN AND RETURN ALL CONTROLS TO THEIR NORMAL POSITION.
 - WHEN THE UNIT IS DEENERGIZED THROUGH THE BAS, CONTROLS SHALL RETURN TO THEIR NORMAL POSITION READY FOR RESTARTING. OUTSIDE AIR DAMPER D-1.1, DAMPERS SHALL CLOSE, COOLING COIL SHALL BE DEENERGIZED. RELIEF AIR DAMPER SHALL BE DEENERGIZED, RETURN AIR DAMPER SHALL BE OPEN.
- HEATING MODE CONTROL
- UNOCCUPIED MODE: SUPPLY FAN SHALL BE RUNNING, OUTDOOR DAMPER D-1.2 SHALL BE SET TO ITS MINIMUM POSITION. THE DIRECT EXPANSION REFRIGERANT COIL SHALL BE DEENERGIZED. THE GAS HEATING COIL SHALL BE ENERGIZED ON A DROP IN SPACE TEMPERATURE BELOW THE SPACE AIR TEMPERATURE SETPOINT OF SEVENTY (70) DEGREES FAHRENHEIT. THE BAS SHALL DEENERGIZE THE GAS HEATING COIL WHEN THE TEMPERATURE REACHES A MINIMUM OF SEVENTY (70) DEGREES FAHRENHEIT.
 - UNOCCUPIED MODE: THE BAS SHALL DETERMINE THE UNOCCUPIED MODE BASED ON A 365 DAY/24 HR GRAPHIC INTERFACE SCHEDULE PROGRAM. THE AIR HANDLING UNIT SHALL BE DEENERGIZED WHEN THE UNOCCUPIED MODE IS INITIATED. THE SUPPLY FAN SHALL BE ENERGIZED WHEN OUTDOOR AIR TEMPERATURE SENSOR FALLS BELOW 40 DEGREES FAHRENHEIT AND THE ROOM TEMPERATURE IS BELOW THE UNOCCUPIED TEMPERATURE SET POINT OF SIXTY-FIVE (65) DEGREES FAHRENHEIT (A.U.). THE ROOM TOP UNIT SHALL BE DEENERGIZED WHEN THE TEMPERATURE IN ALL ZONES REACHES A MINIMUM OF SEVENTY (70) DEGREES FAHRENHEIT (A.U.).
 - THE AHU INTERNAL CONTROL SYSTEM SHALL ENERGIZE AND CONTROL THE GAS HEATING COIL TO MAINTAIN THE OCCUPIED SPACE AIR TEMPERATURE SETPOINT.
- COOLING MODE CONTROL
- UNOCCUPIED MODE: SUPPLY FAN SE-1 SHALL BE RUNNING, OUTDOOR DAMPER D-1.2 SHALL BE OPEN TO ITS MINIMUM POSITION.
 - THE BAS SHALL MODULATE THE REFRIGERANT CIRCUIT TO MAINTAIN THE SPACE AIR TEMPERATURE SET POINT OF SEVENTY-FIVE (75) DEGREES FAHRENHEIT. ON A FALL IN TEMPERATURE BELOW ITS SPACE AIR SET POINT OF SEVENTY-FIVE (75) DEGREES FAHRENHEIT, THE BAS SHALL DEENERGIZE THE REFRIGERANT CIRCUIT.
 - UNOCCUPIED MODE: THE BAS SHALL DETERMINE THE UNOCCUPIED MODE BASED ON A 365 DAY/24 HR GRAPHIC INTERFACE SCHEDULE PROGRAM. THE AHU SHALL BE DEENERGIZED WHEN THE UNOCCUPIED MODE IS INITIATED. THE SUPPLY FAN SHALL BE ENERGIZED WHEN OUTDOOR AIR TEMPERATURE, AS SENSED BY GLOBAL OUTDOOR AIR TEMPERATURE SENSOR, RISES ABOVE 50°F AND THE ROOM TEMPERATURE RISES ABOVE THE UNOCCUPIED TEMPERATURE SET POINT OF SEVENTY-FIVE (75) DEGREES FAHRENHEIT (A.U.). THE AHU SHALL BE DEENERGIZED WHEN THE TEMPERATURE REACHES A MINIMUM OF SEVENTY-FIVE (75) DEGREES FAHRENHEIT (A.U.).
 - OUTDOOR AIR DAMPER AND CO2 LEVEL CONTROL
 - THE OUTDOOR AIR DAMPER SHALL BE CLOSED DURING WARM-UP AND UNOCCUPIED MODES.
 - DURING OCCUPIED MODE, OUTDOOR AIR DAMPER SHALL INITIALLY OPERATE ITS MINIMUM POSITION TO MAINTAIN THE MINIMUM OUTDOOR AIR QUANTITY AS SENSED BY FLOW MONITORING STATION LEMS-1.1. MINIMUM OUTDOOR AIR POSITION QUANTITY SHALL BE SET TO THE SCHEDULED VALUE.
 - THE OUTDOOR AIR DAMPER SHALL MODULATE TO MAINTAIN THE MAXIMUM OUTDOOR AIR QUANTITY UPON A RISE IN CO2 LEVEL. ON A FALL IN TEMPERATURE, OUTDOOR AIR POSITION QUANTITY SHALL BE SET TO ITS MINIMUM POSITION.
 - ECONOMIZER CONTROL
 - WHEN OUTDOOR AIR DRY BULB TEMPERATURE IS LESS THAN 70°F AND THE ENTHALPY DIFFERENCE IN 20 BTU/LB OF DRY AIR, THE BAS SHALL MODULATE THE OUTDOOR AIR RELIEF AIR DAMPERS TO MAINTAIN THE SETPOINT OF 50°F.
 - ECONOMIZER CONTROL SHALL BE CANCELED IF OUTDOOR AIR DRY BULB TEMPERATURE RISES ABOVE 70°F OR ENTHALPY RISES ABOVE 30 BTU/LB OF DRY AIR.
 - DEHUMIDIFICATION CONTROL
 - WHEN THE RETURN AIR RELATIVE HUMIDITY RISES ABOVE SIXTY (60) PERCENT, THE INTERNAL CONTROL SYSTEM SHALL OPERATE THE REFRIGERANT CIRCUIT TO SUBCOOL THE SUPPLY AIR VIA THE EVAPORATOR COIL AND REHEAT THE AIR VIA THE HOT GAS REHEAT COIL. WHEN THE RETURN AIR RELATIVE HUMIDITY, SENSED BY RH-1.1, DROPS BELOW FIFTY-FIVE (55) PERCENT, CONTROL OF REFRIGERANT CIRCUIT SHALL BE RETURNED TO THE SPACE AIR TEMPERATURE SENSOR.
 - ON A RISE IN RETURN AIR HUMIDITY ABOVE 60% RH ALL TEMPERATURE CONTROL, ECONOMIZERS AND CO2 SEQUENCES SHALL BE OVERRIDDEN. OUTSIDE AIR, RETURN AIR AND RELIEF AIR DAMPERS SHALL RETURN TO THEIR MINIMUM BALANCED POSITIONS.
 - WHEN THE RETURN AIR RELATIVE HUMIDITY DROPS BELOW 55% FOR 15 MINUTES, THE DEHUMIDIFICATION MODE SHALL BE CANCELED. THE DISCHARGE AIR SETPOINT SHALL BE RETURNED TO NORMAL (55°F) AND THE COOLING COIL SHALL BE CONTROLLED TO MAINTAIN THE DISCHARGE AIR SETPOINT.

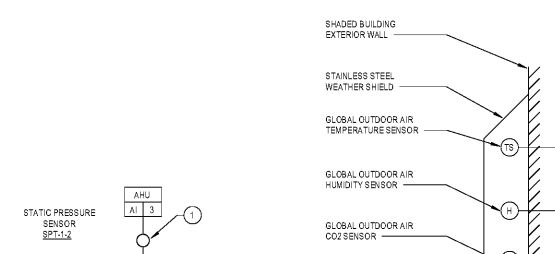

AHU CONTROLS DIAGRAM
 SCALE: N.T.S.

Order Plans @ WWW.IDLINE.com

**HAWTHORNE ELEMENTARY SCHOOL
 GYM HVAC DESIGN**
 2935 Caladium Drive NE
 Atlanta, GA 30345

STANLEY
 LOVE
 STANLEY
 P a C

ARCHITECTURE
 INTERIORS PLANNING
 PROGRAM MANAGEMENT

1186 SPRING STREET, N.W.
 ATLANTA, GEORGIA 30309
 404.576.0596
 404.576.0617
 www.slrlg.com/stanleygpc.com

DRAWING TITLE
MECHANICAL CONTROLS

PROFESSIONAL SEAL

DANIEL NOTO

mf Engineering

888 HANCOCK DRIVE SUITE 728
 ATLANTA, GA 30309 878.915.0020

SCALES AS STATED HEREON ARE VALID ON THE ORIGINAL DRAWING. THE DIMENSIONS OF WHICH ARE BEING PLOTTED. THE SCALES OF THE REPRODUCED DRAWINGS SHALL BE THE RATIO OF THE OVERALL SHEET DIMENSIONS OF THE PRINT TO THE DIMENSIONS OF THE ORIGINAL DRAWING.

THE DRAWING IS THE PROPERTY OF STANLEY LOVE STANLEY P.C. AND IS NOT TO BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR ANY PART THEREOF, WITHOUT THE WRITTEN PERMISSION OF STANLEY LOVE STANLEY P.C. HEREIN AND IS NOT TO BE USED ON ANY OTHER PROJECT. IT IS TO BE RETURNED UPON REQUEST.

COPYRIGHT © 2016. ALL RIGHTS RESERVED BY STANLEY LOVE STANLEY P.C.

DRAWING NO.
 DATE
 01/31/2020
 PROJECT NO.
 6919.2
 DRAWING NO.

M-301

RELEASED FOR CONSTRUCTION 01/31/2020